


Milano




Mono Basin Tap

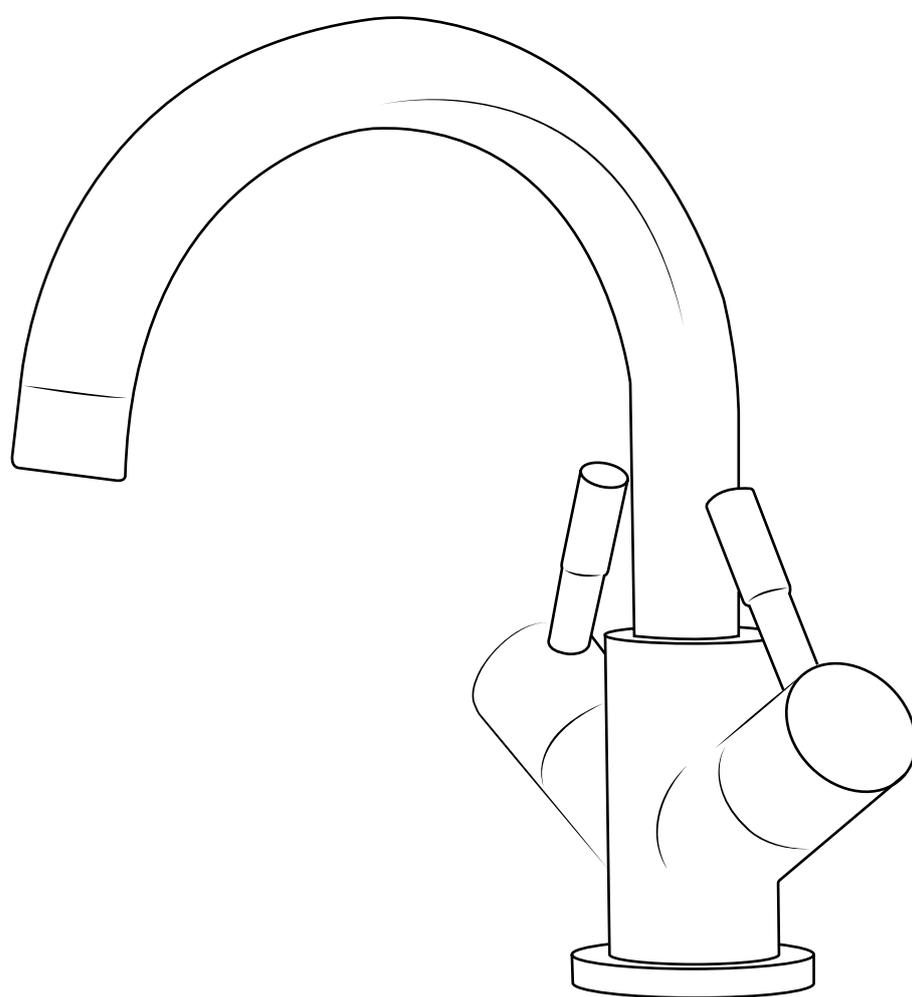






Installation Guide

Installation


Tools required for installing:

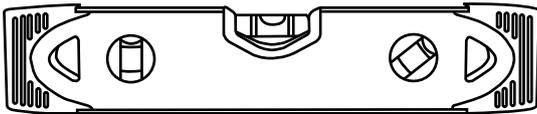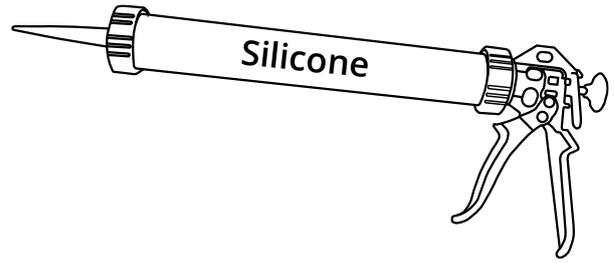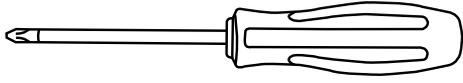

Parts included:

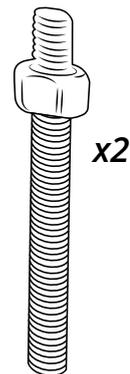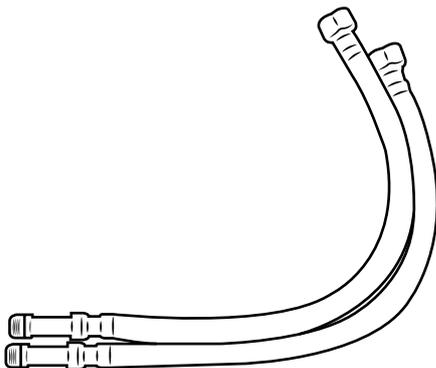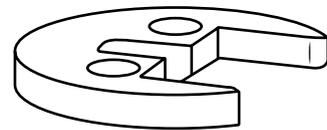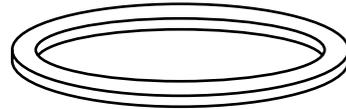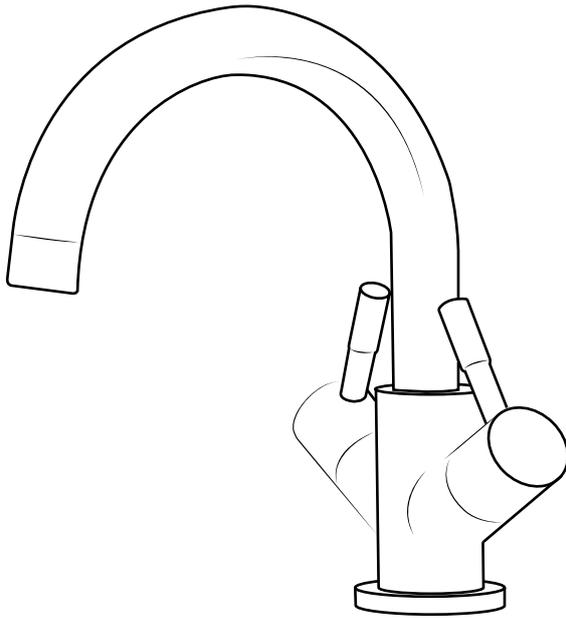


1

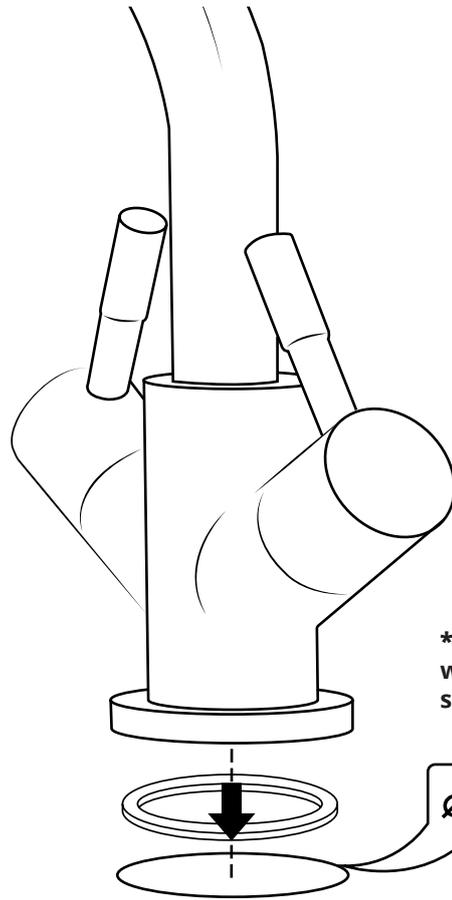


Remember to install the 'O' ring o washer between the mixer body & sanitary ware

Ø 35mm


2

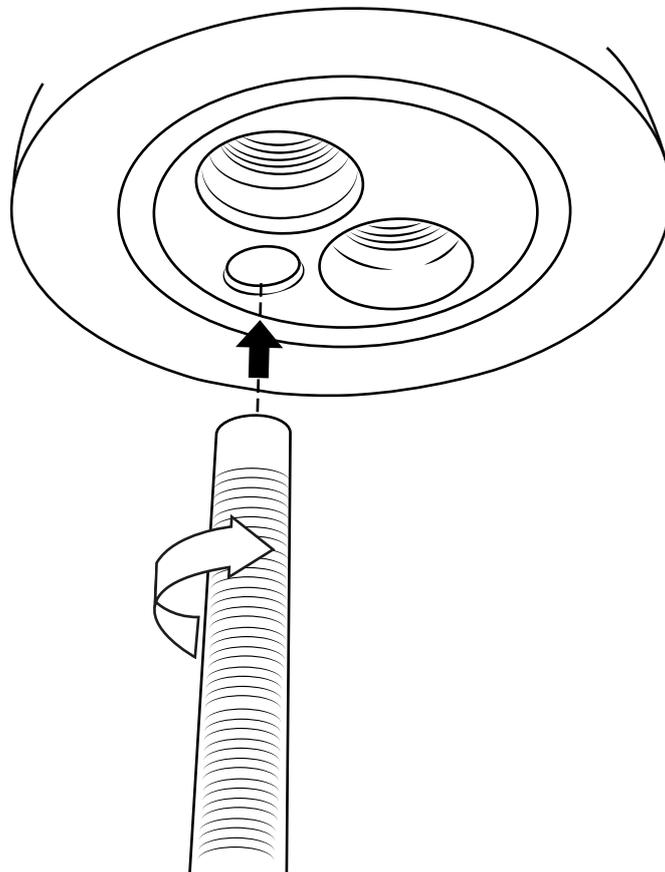




3

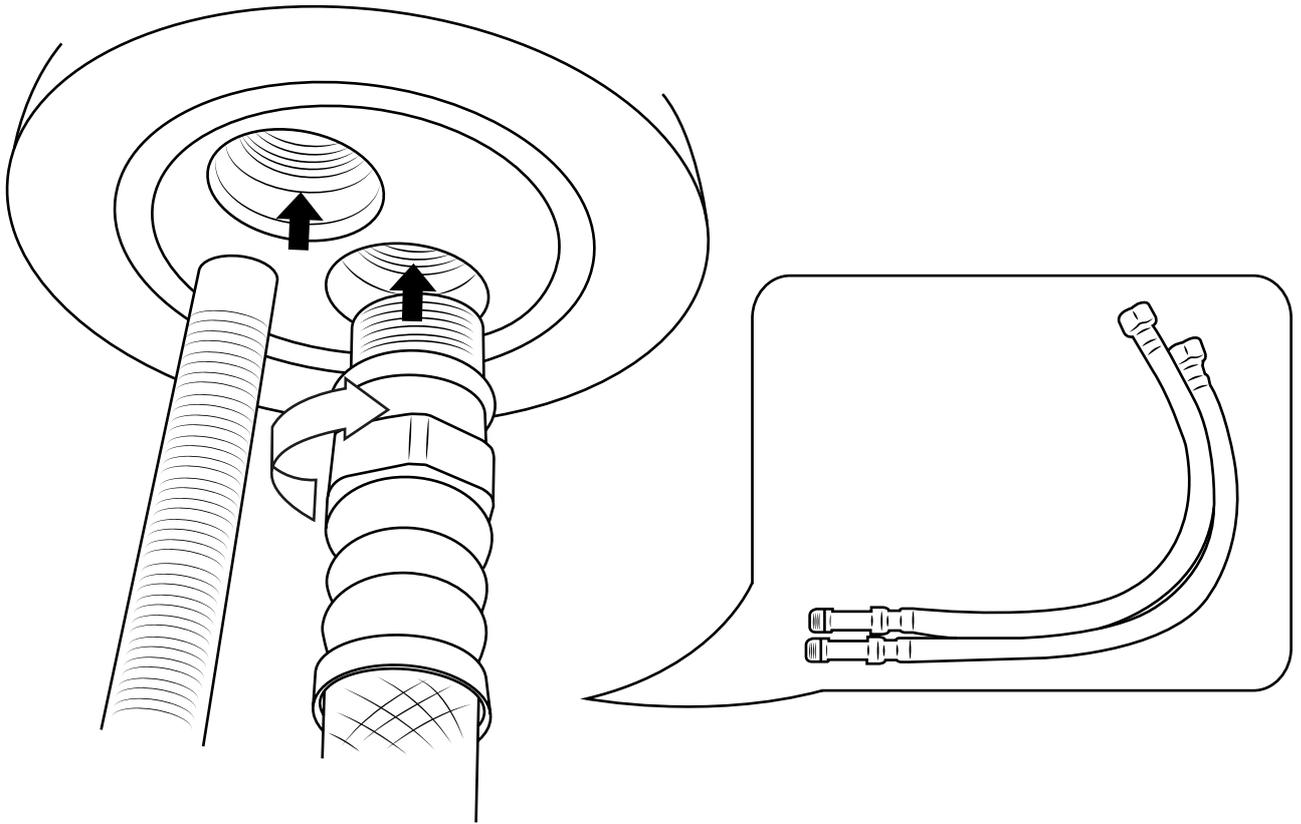




4

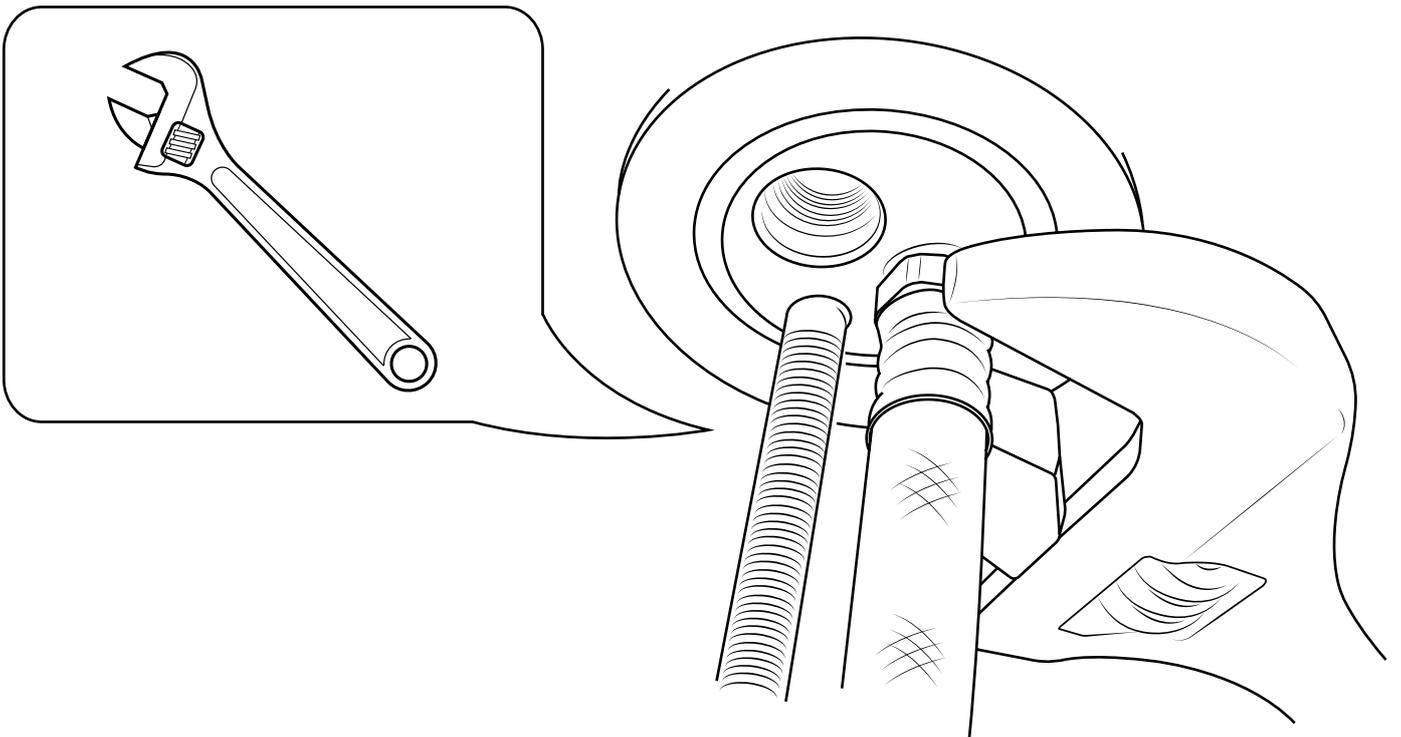

5

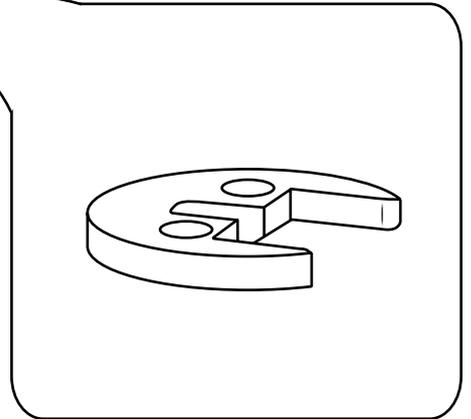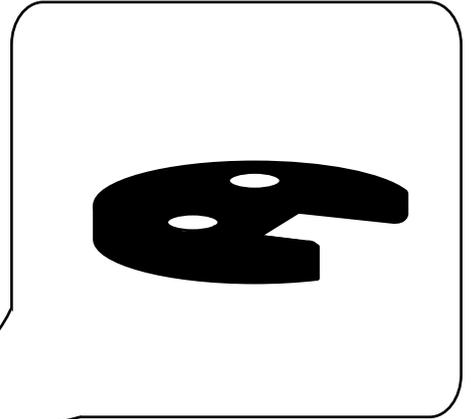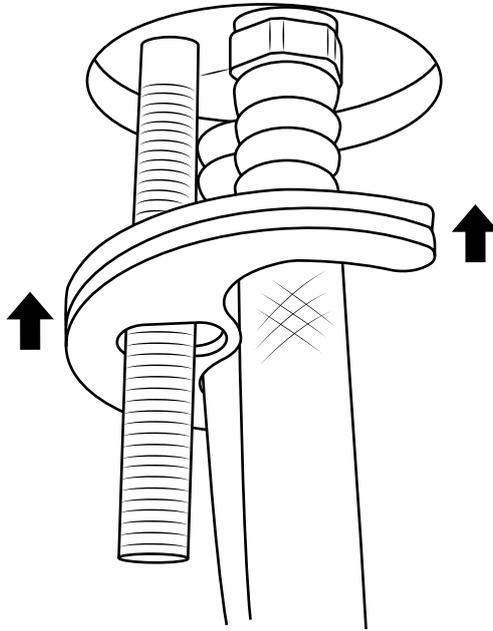

6

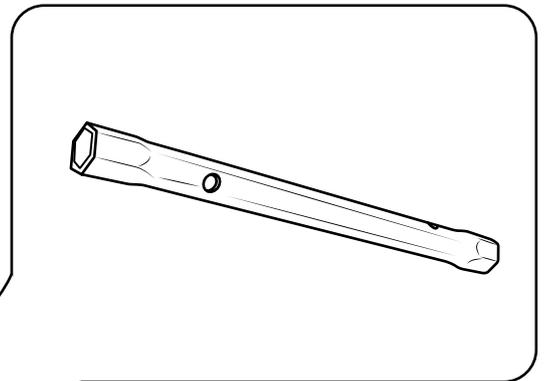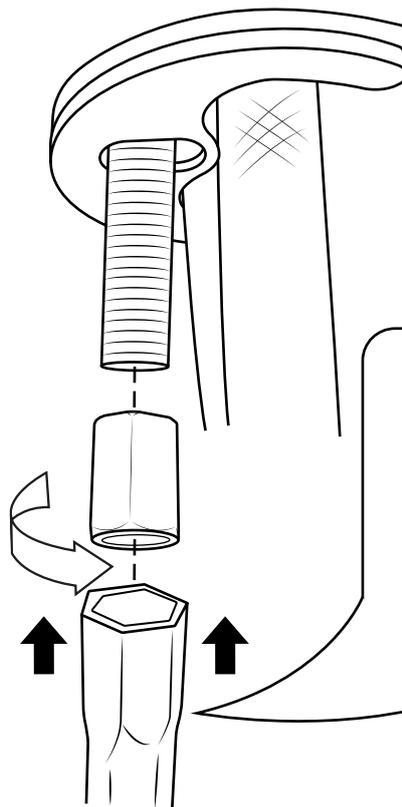

7

