


Milano



Art Deco Mono Basin Tap

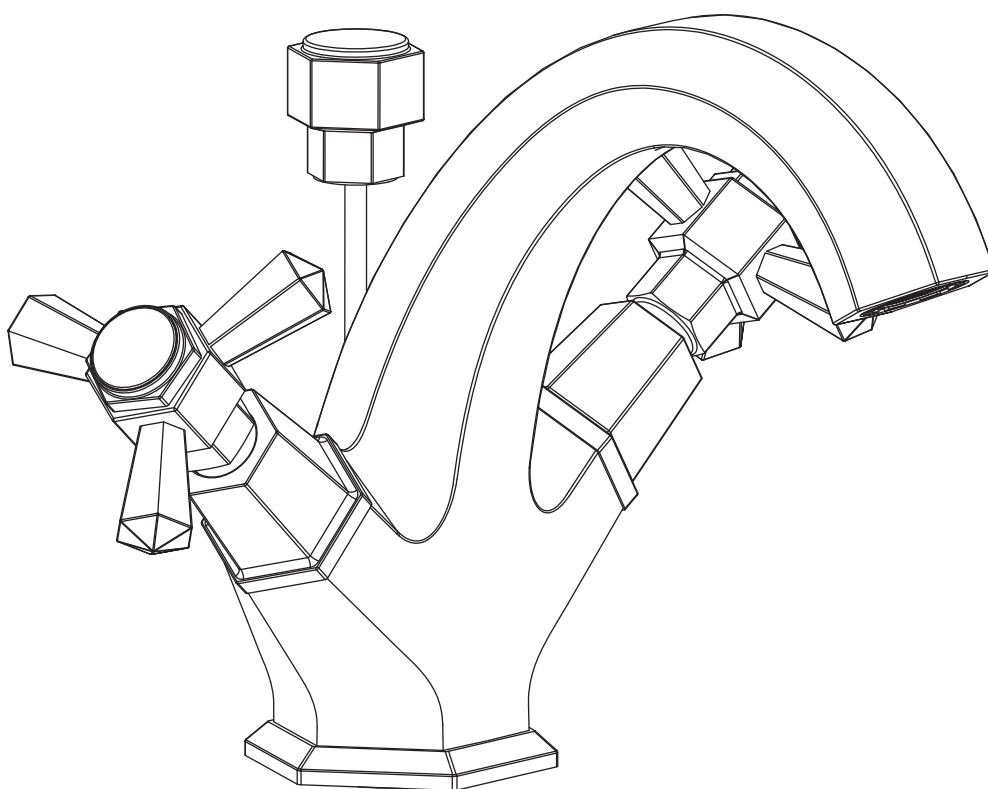

Installation Guide








Installation

Tools required for installing:

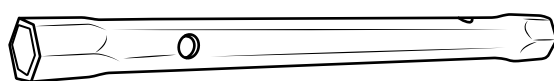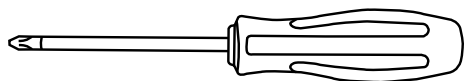


Parts included:

① Style may vary

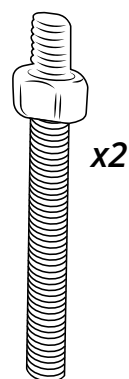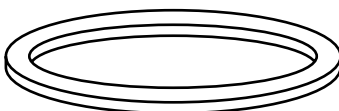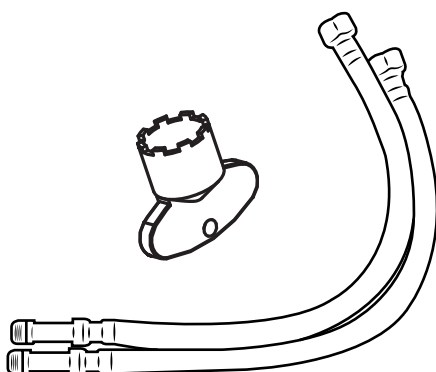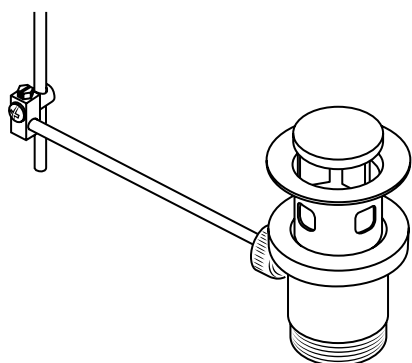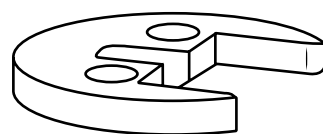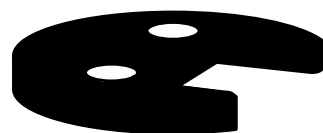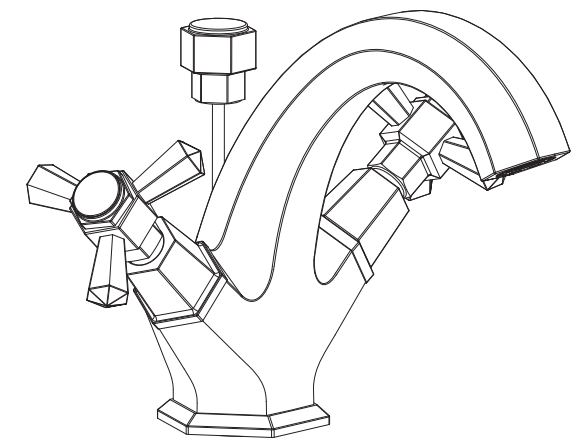


1

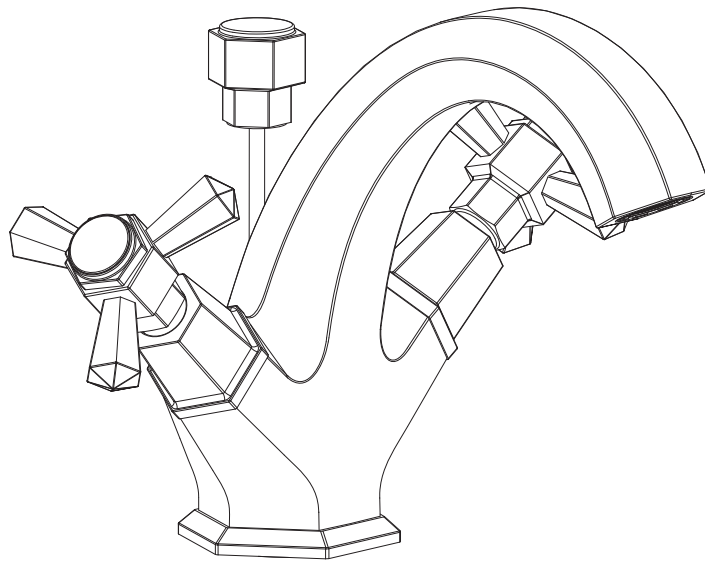


Remember to install the 'O' ring o washer between the mixer body & sanitary ware




2

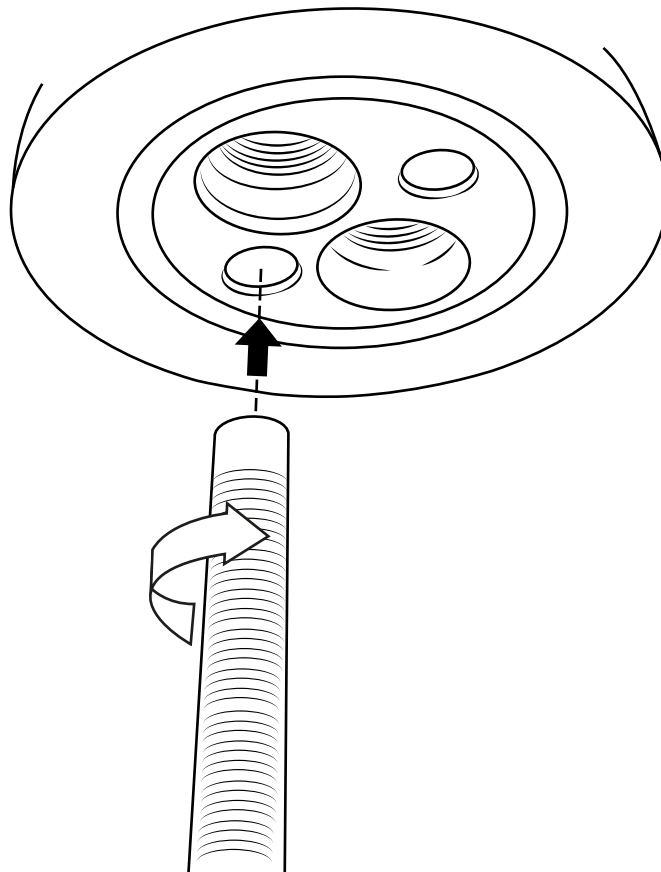





3

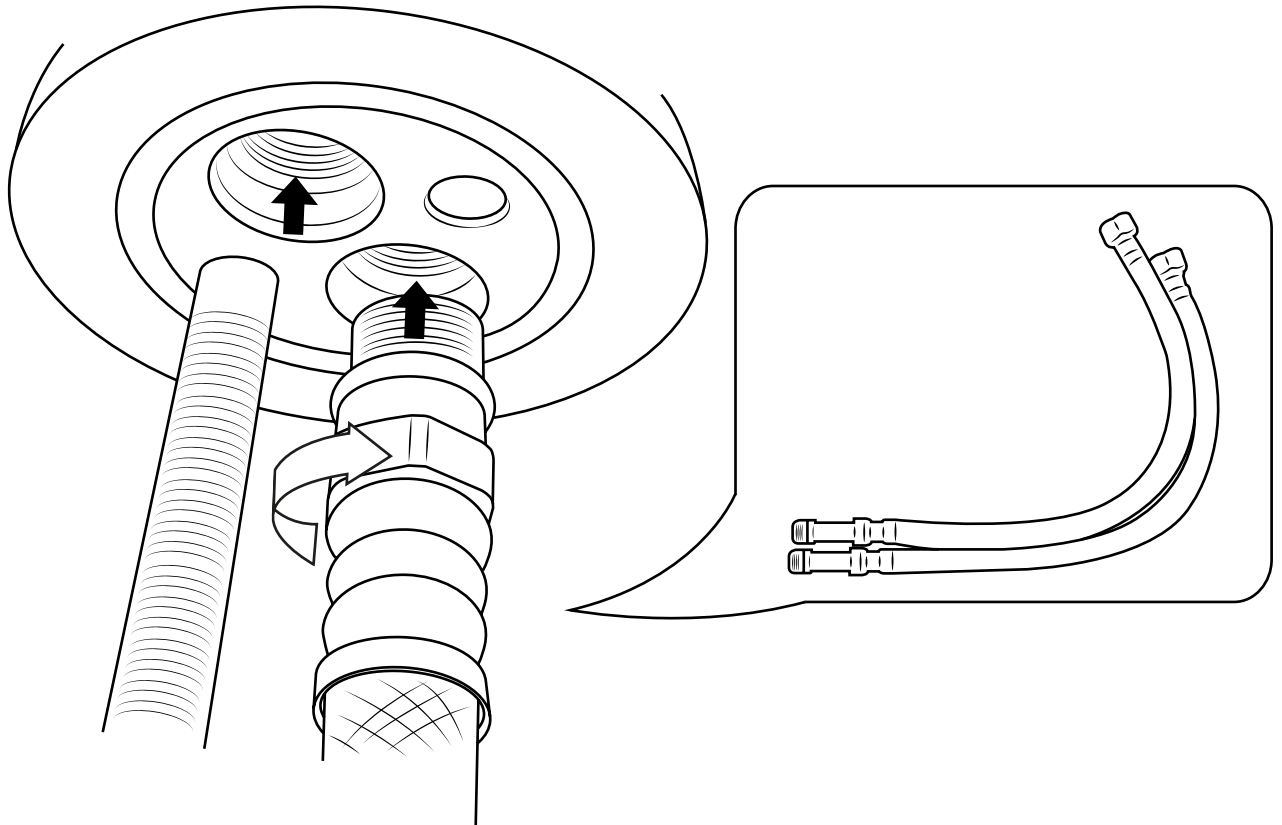




4

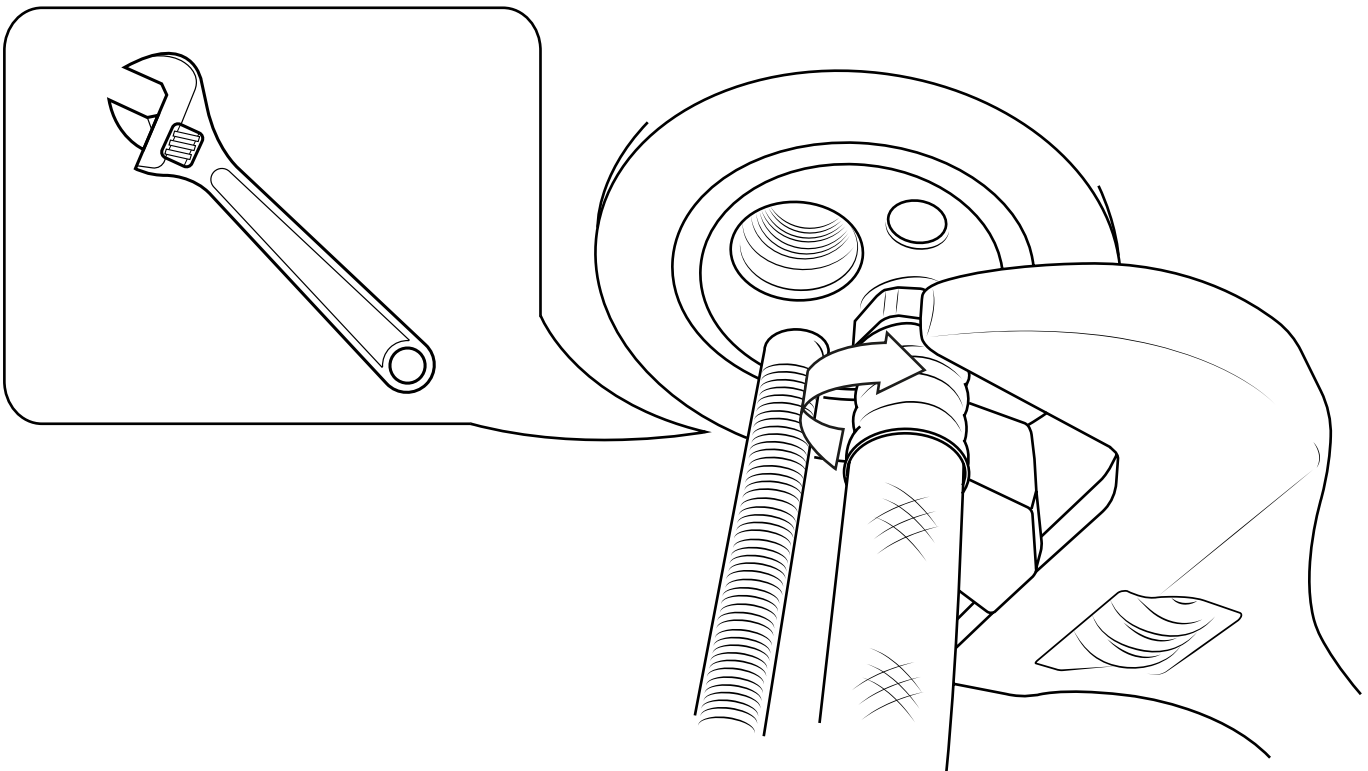



5

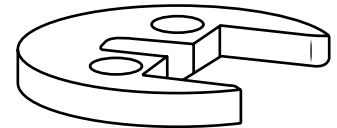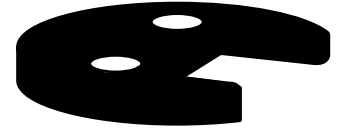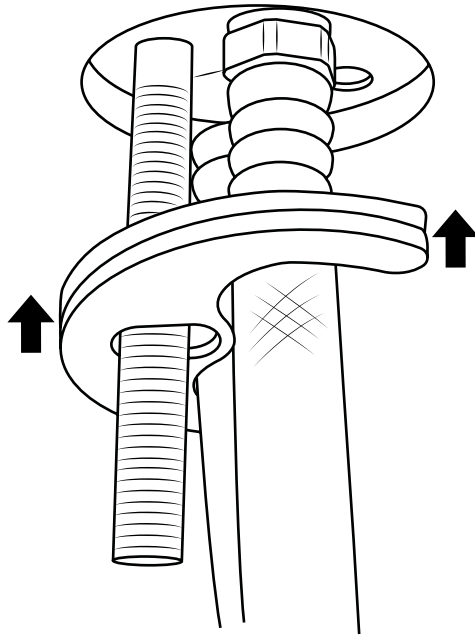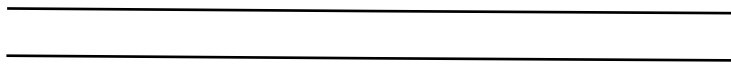

6

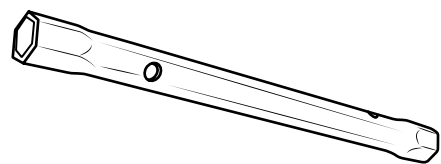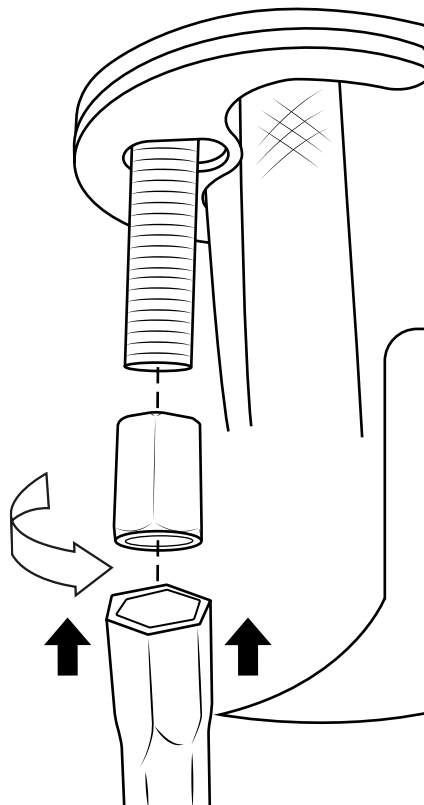
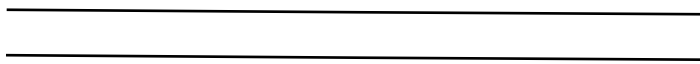


7

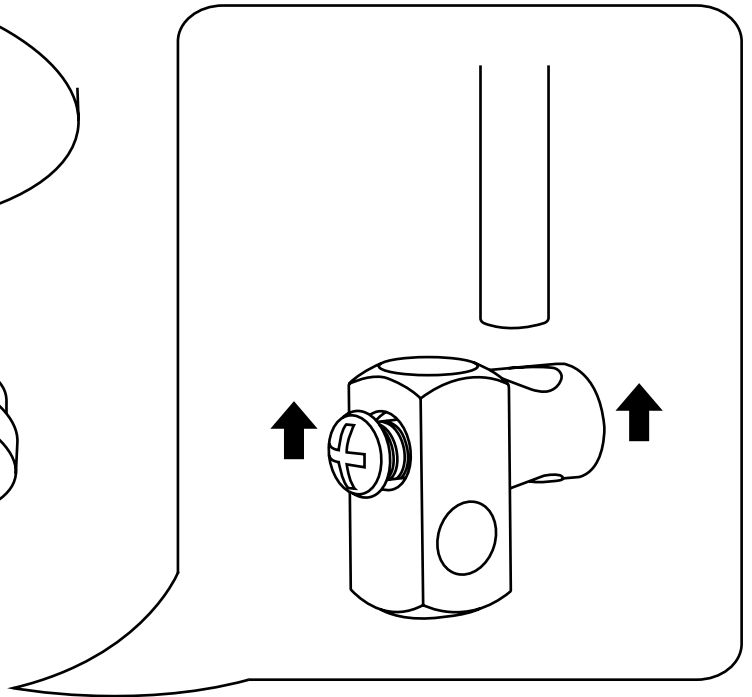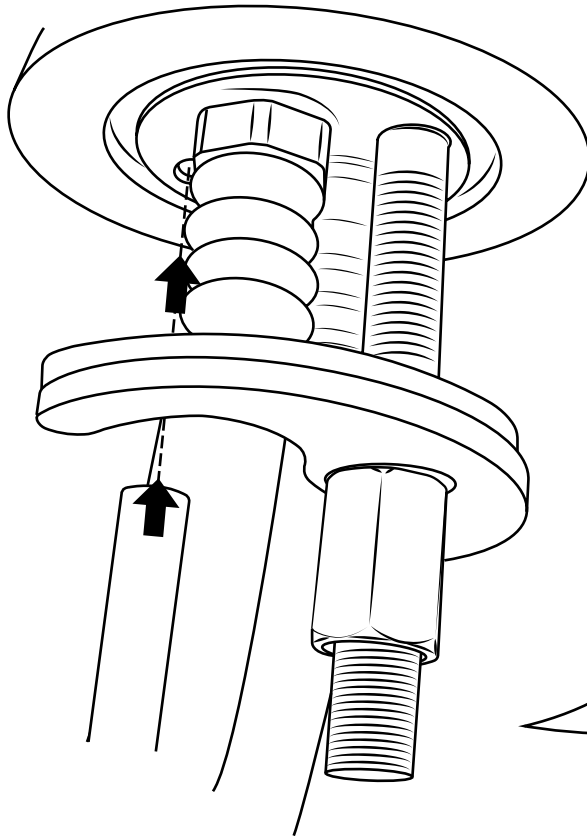


8


i Style may vary

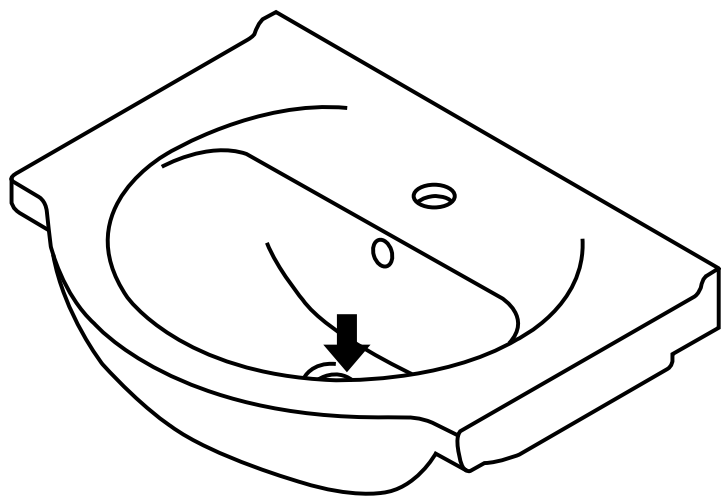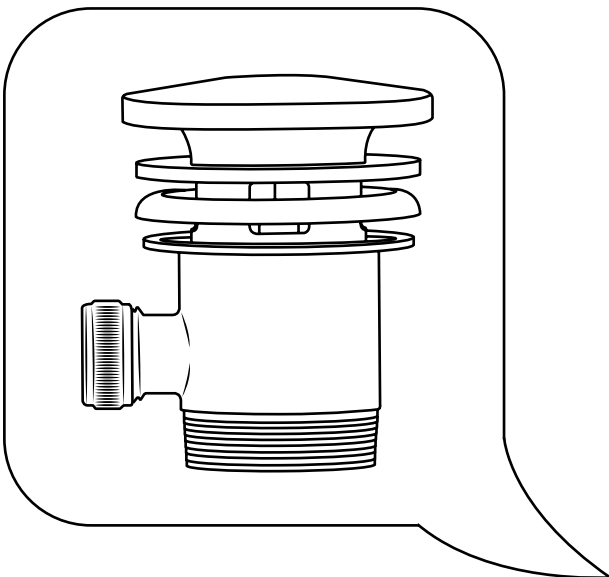


9

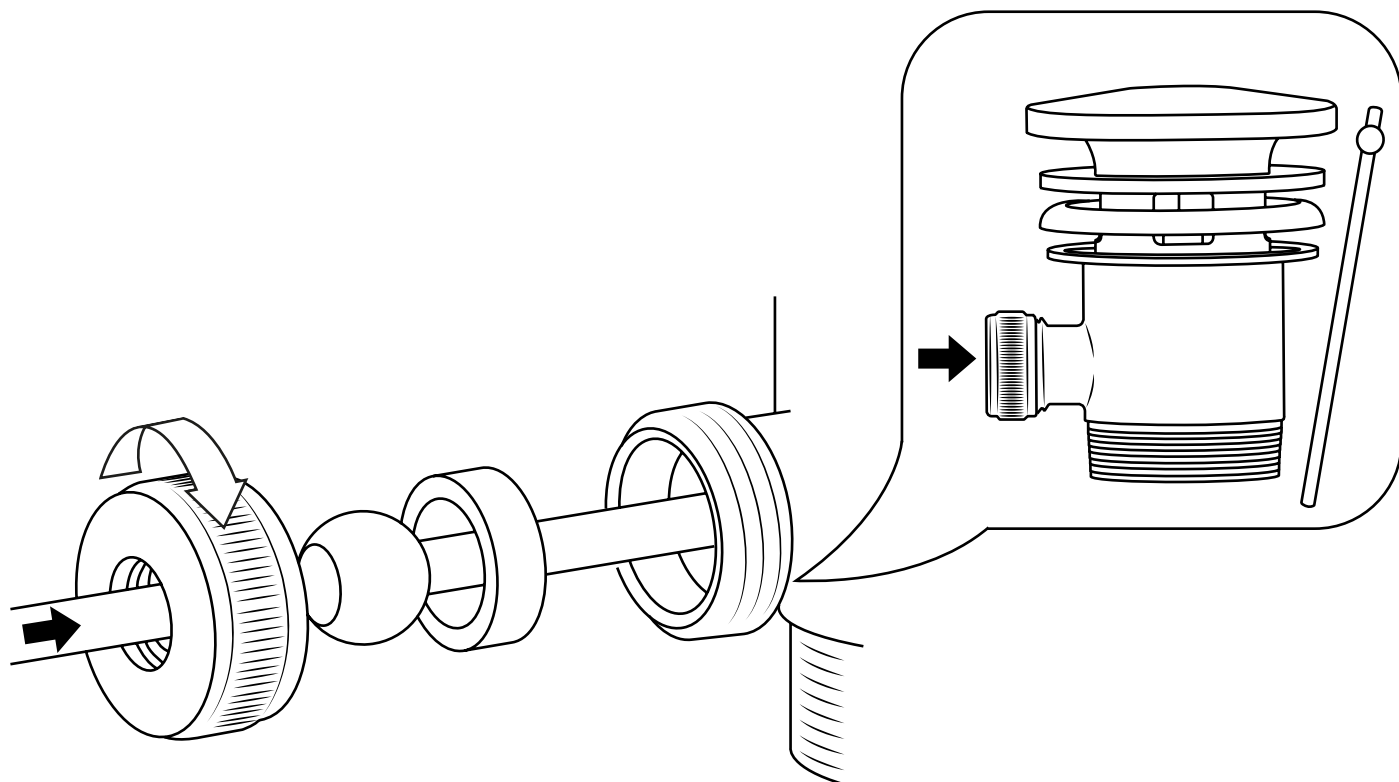


10

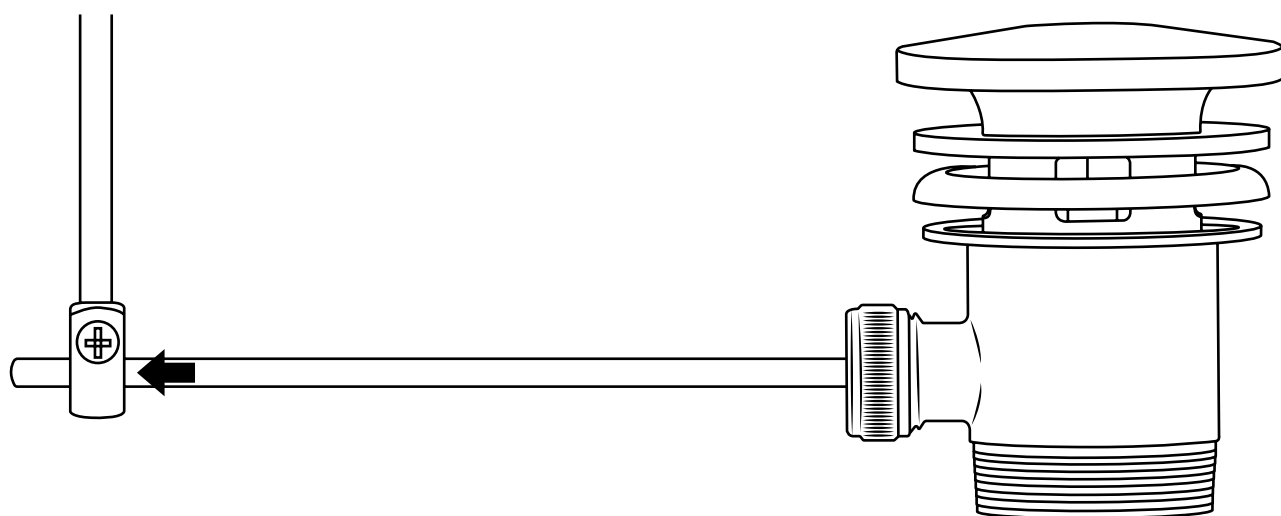

11

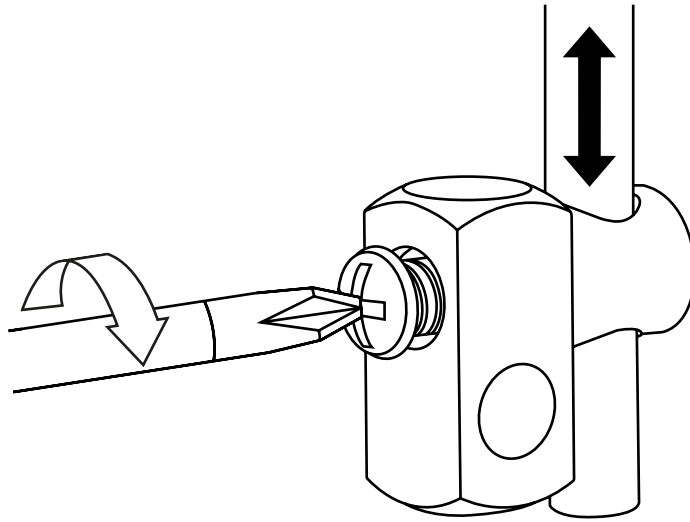

12

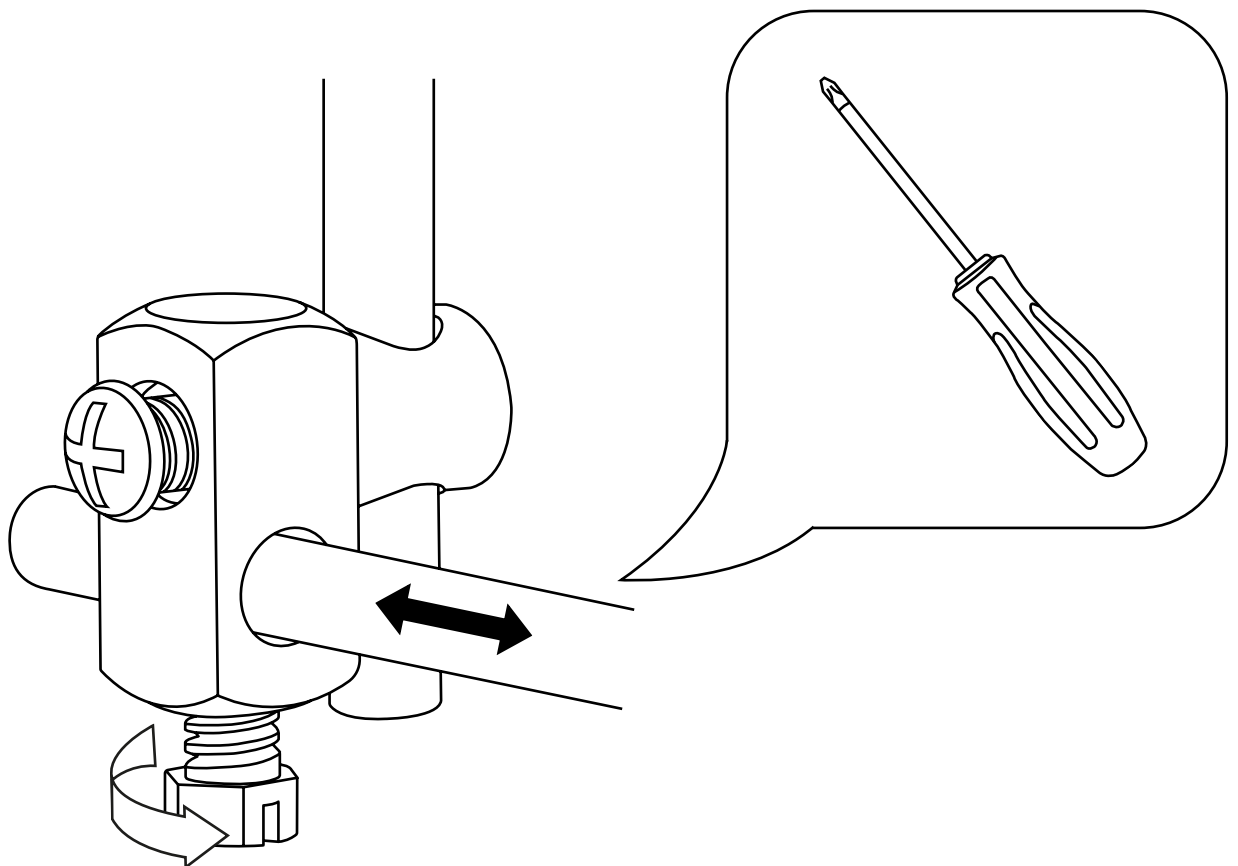

13

