



Milano

Freestanding Bath




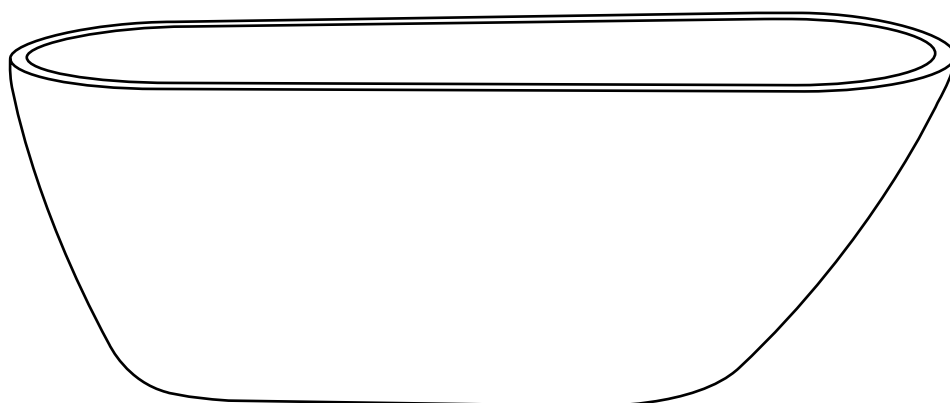


 Style may vary


Installation Guide

Installation


Tools required for installing:

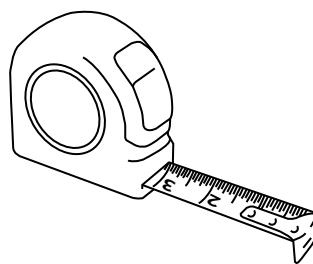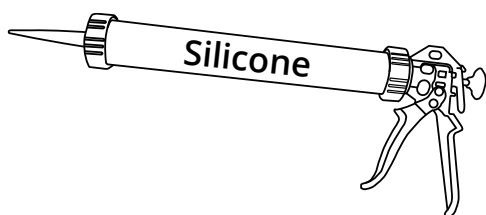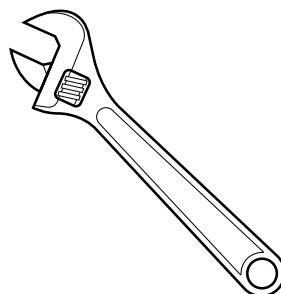


Parts included:

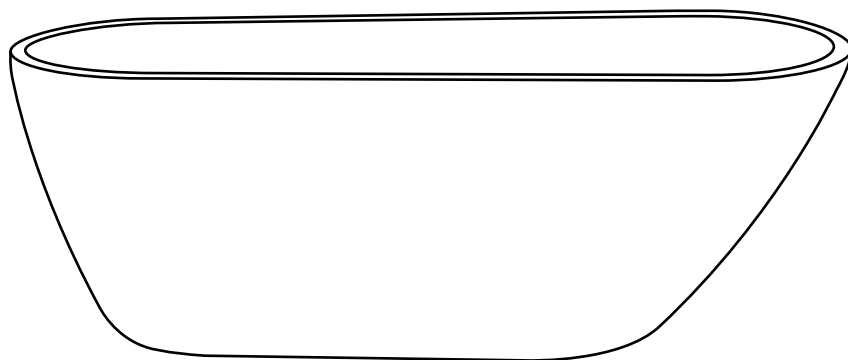


1

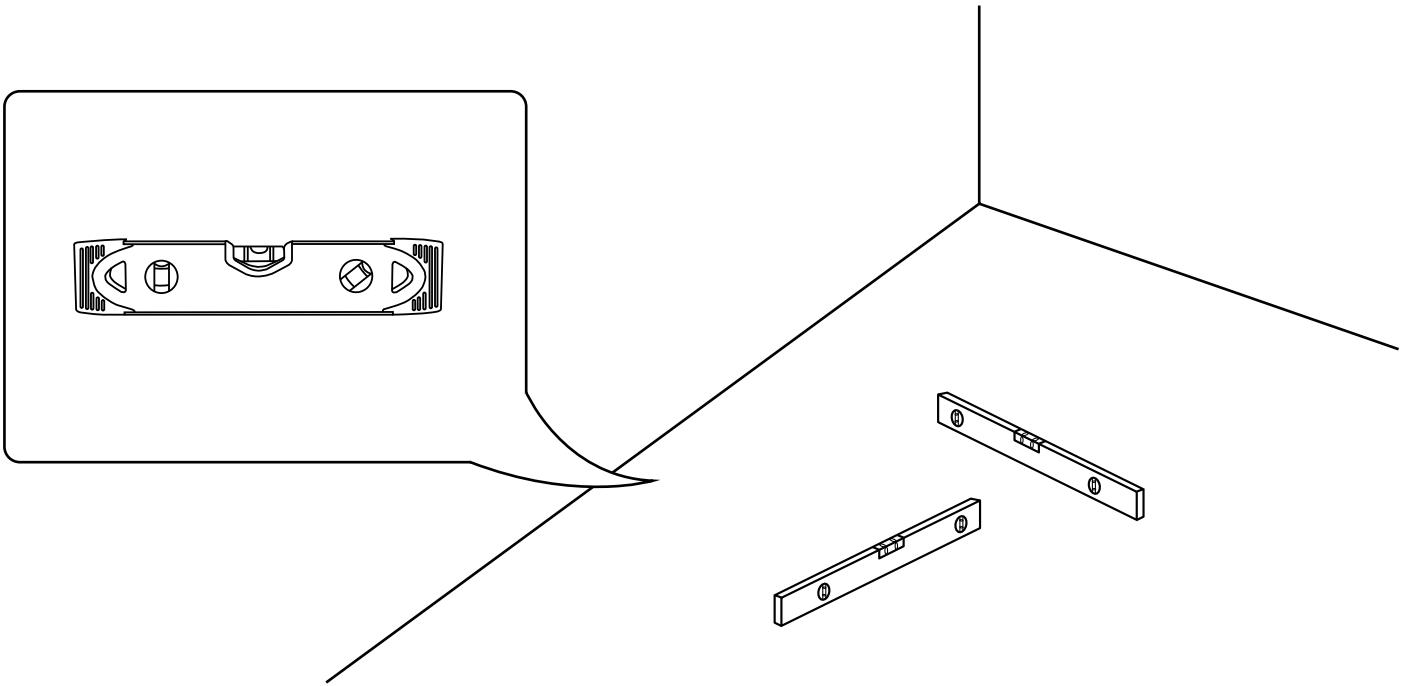


2

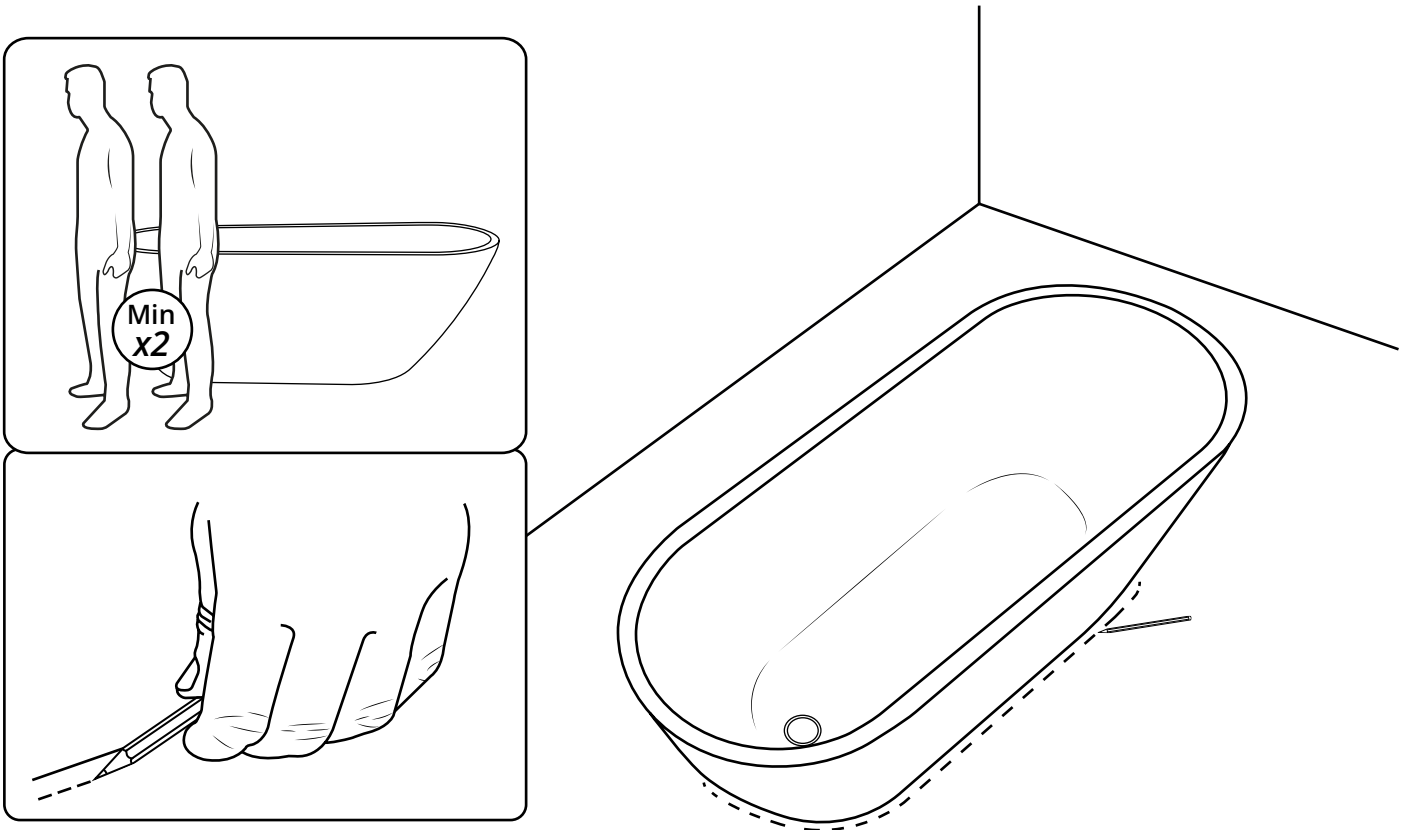


3

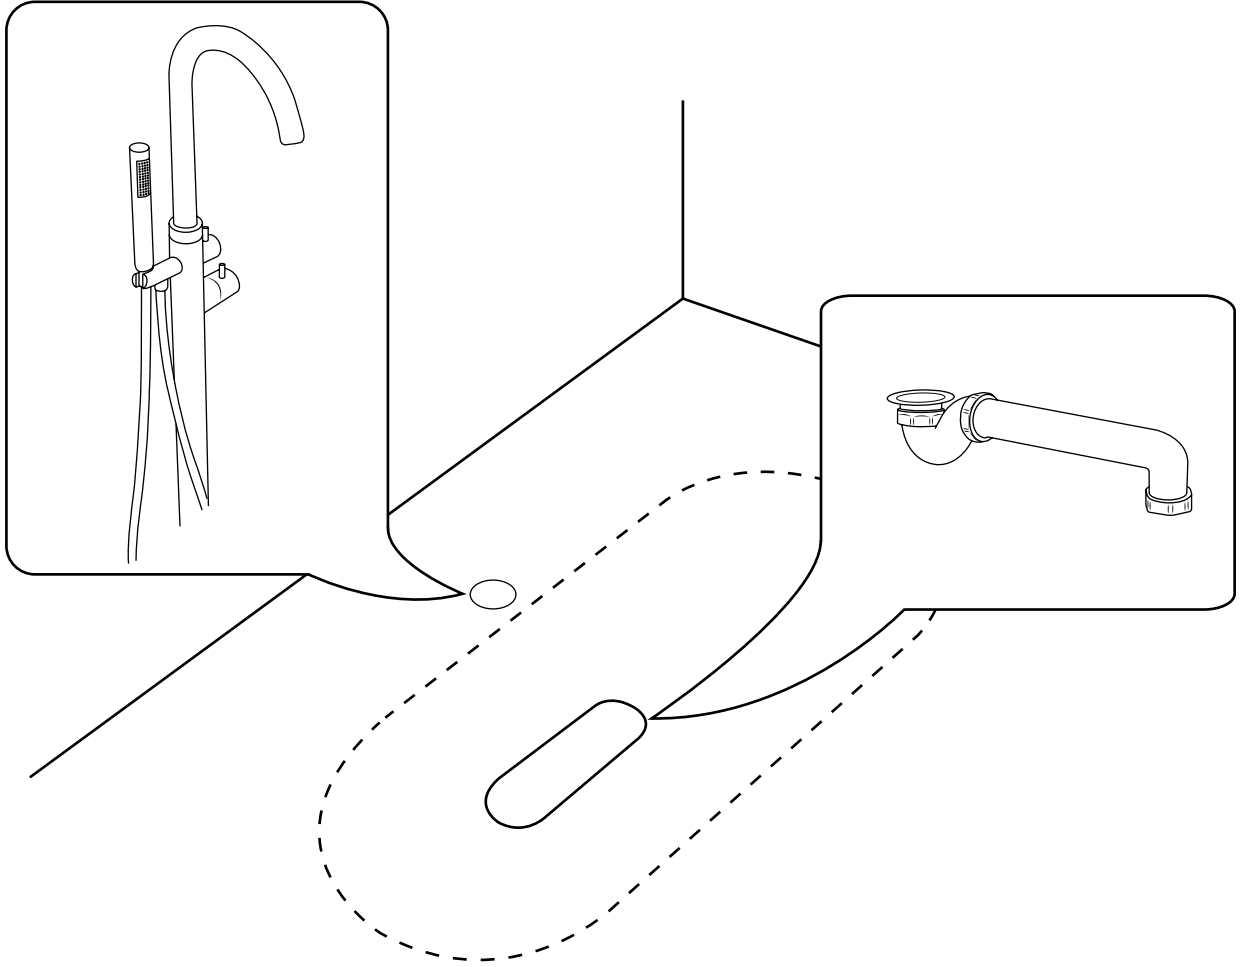

4

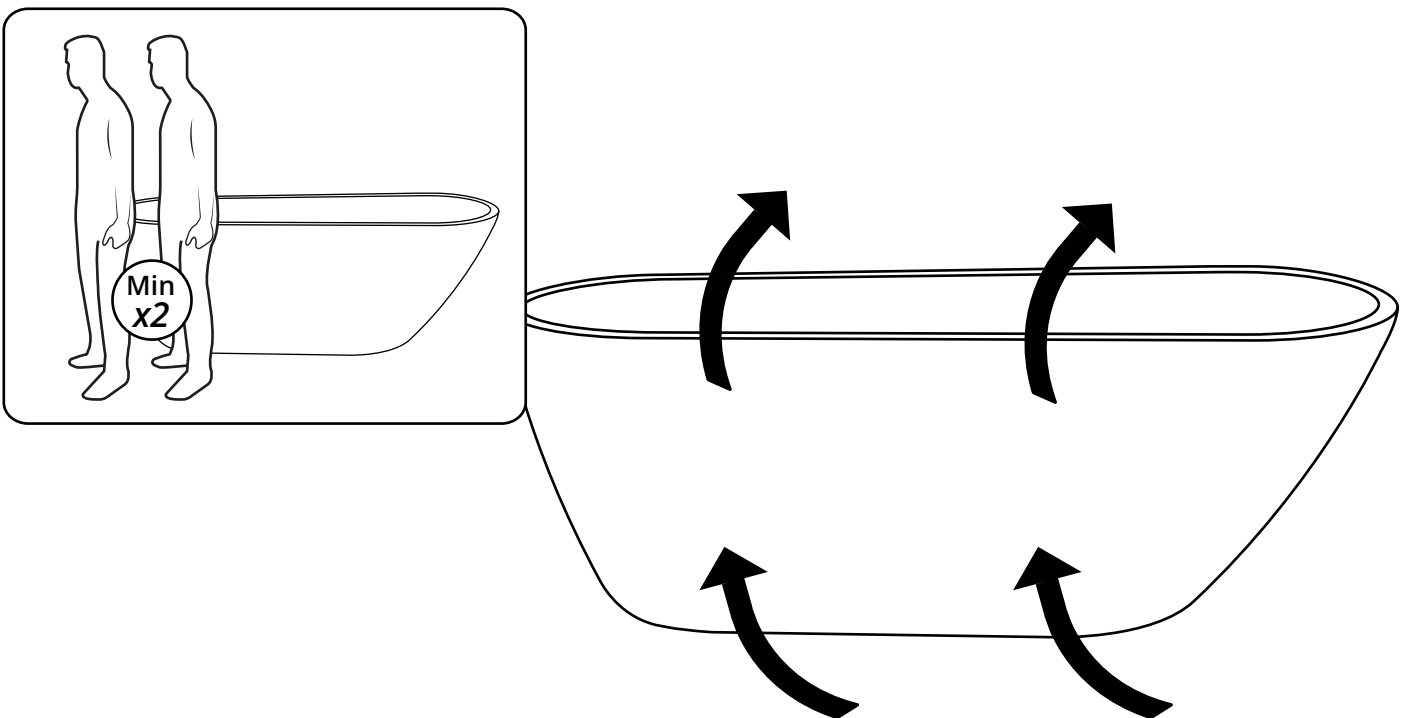


5

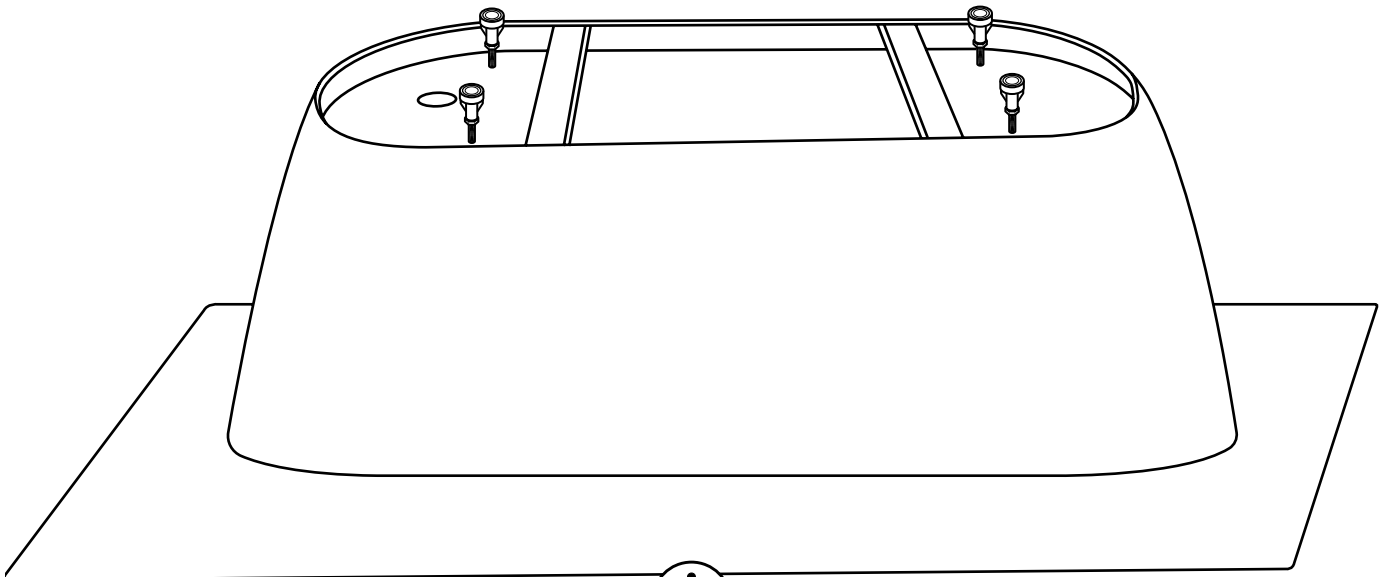


i Place on a soft surface


6

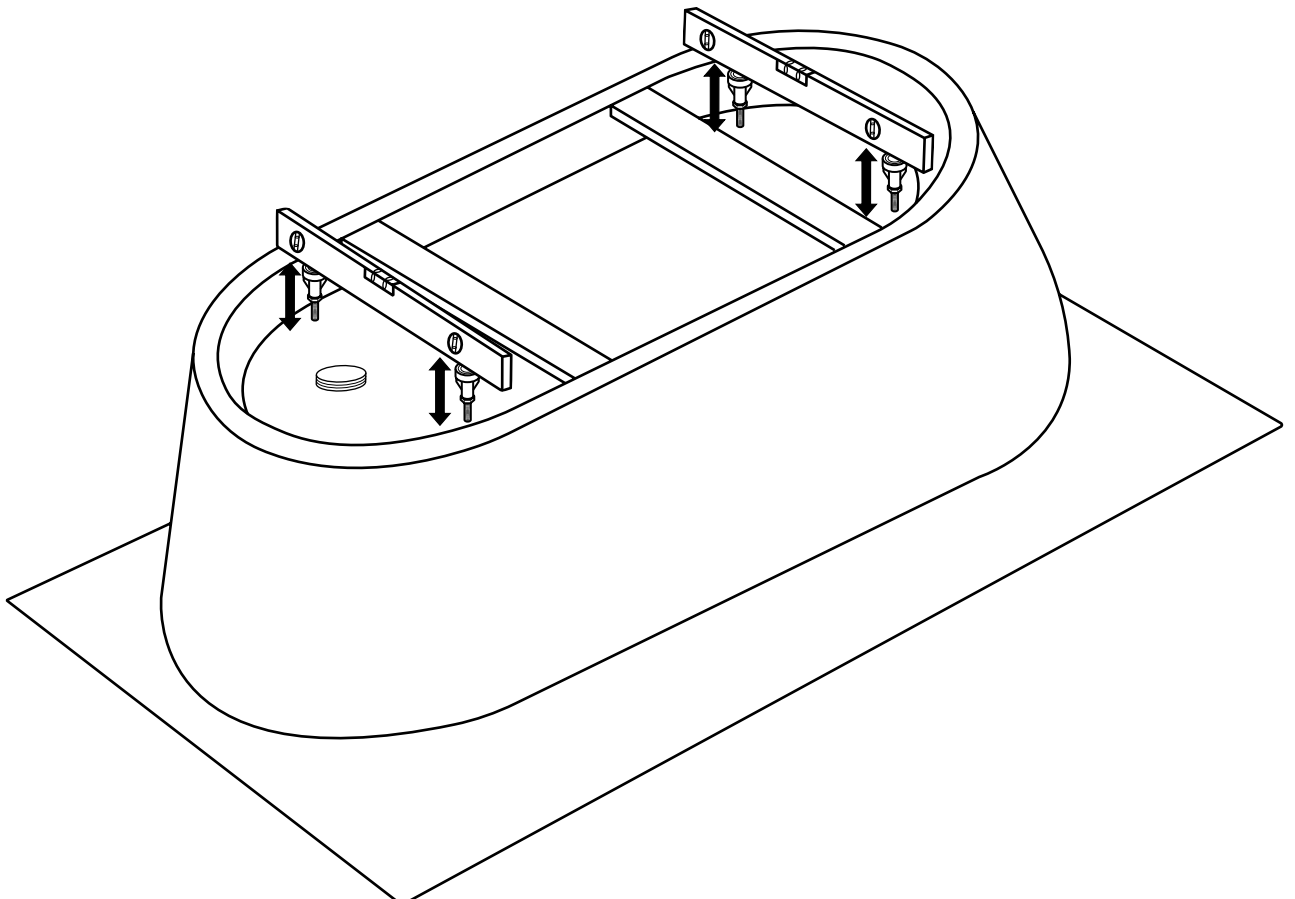


7

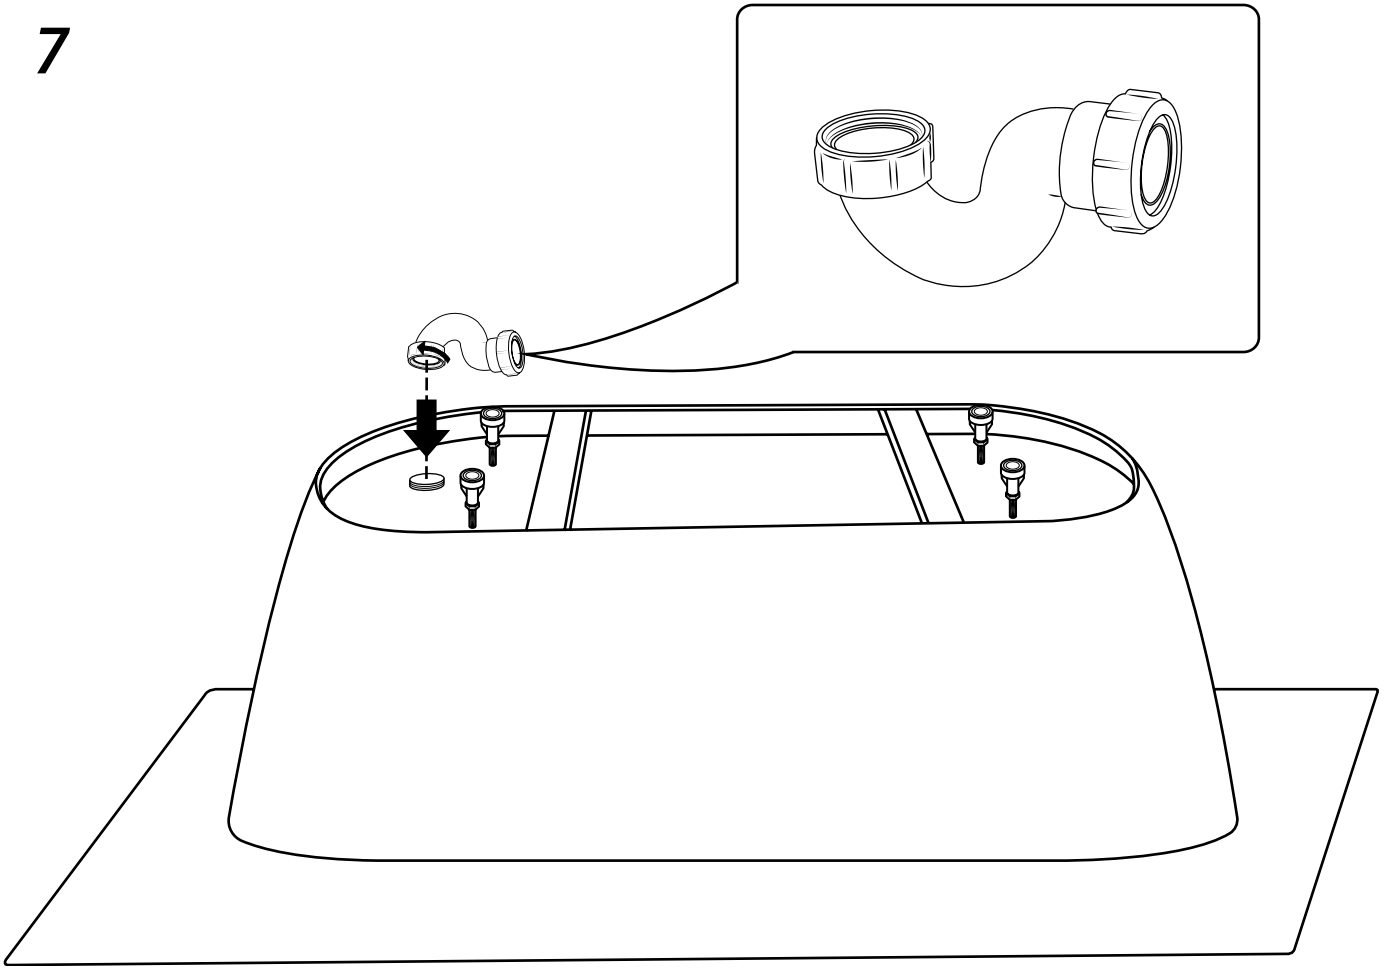


8

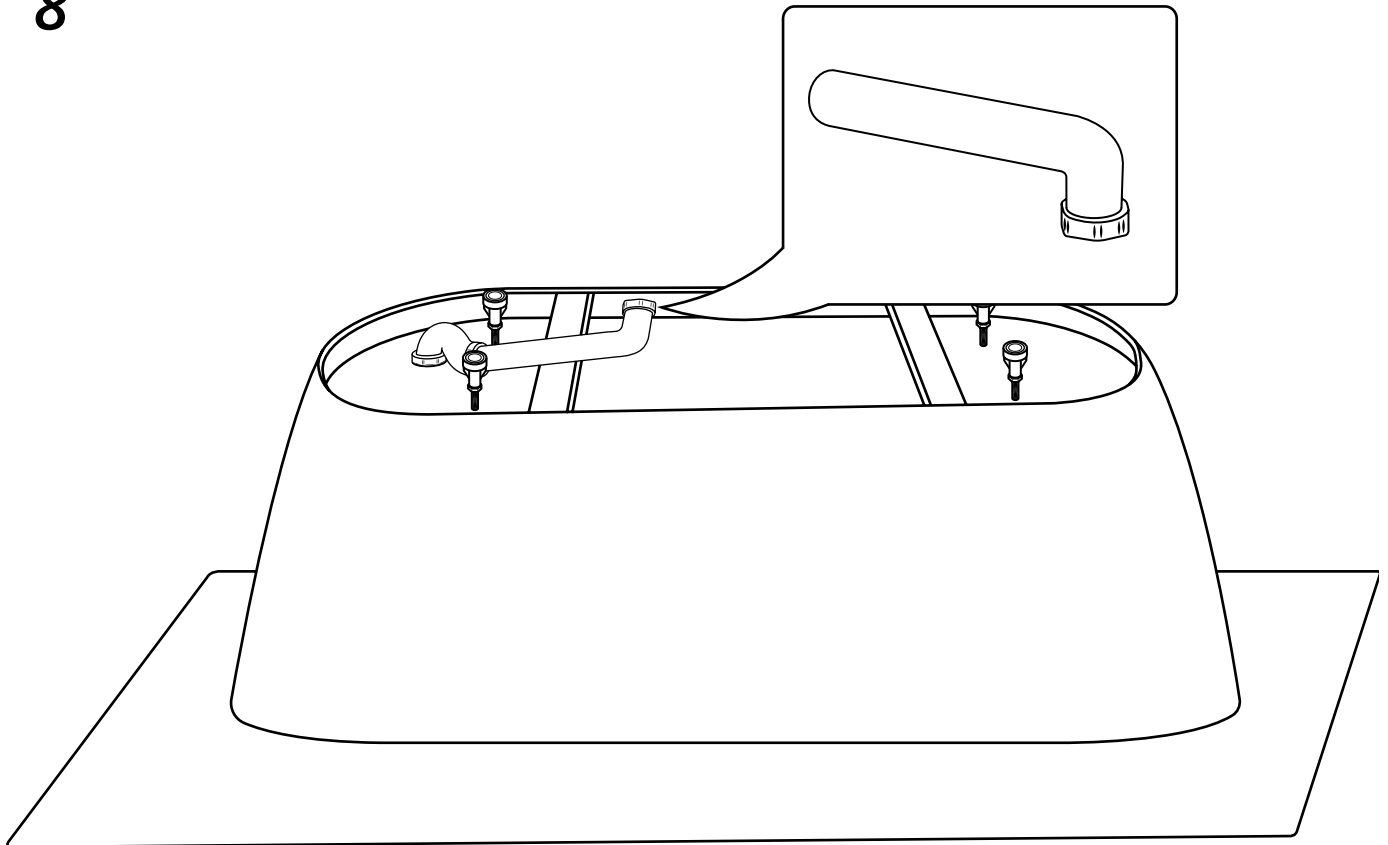


9

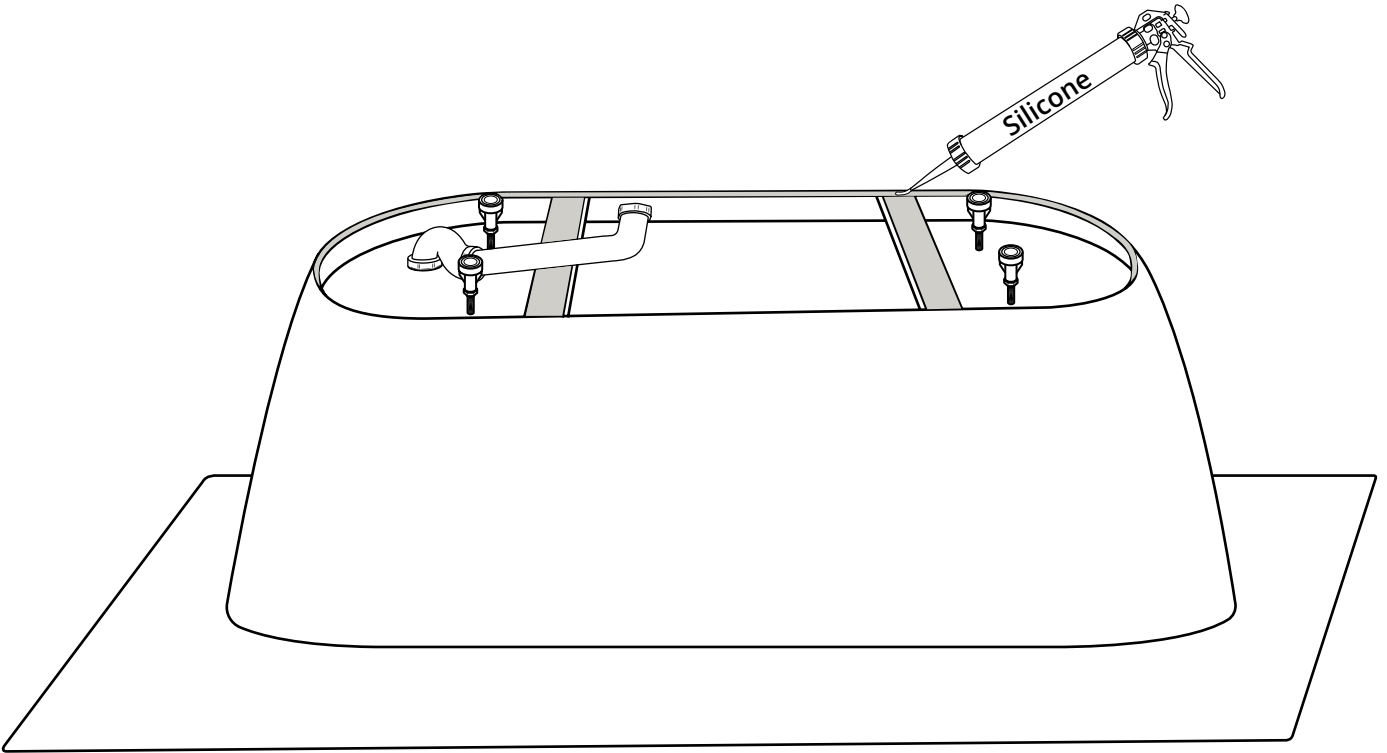


10

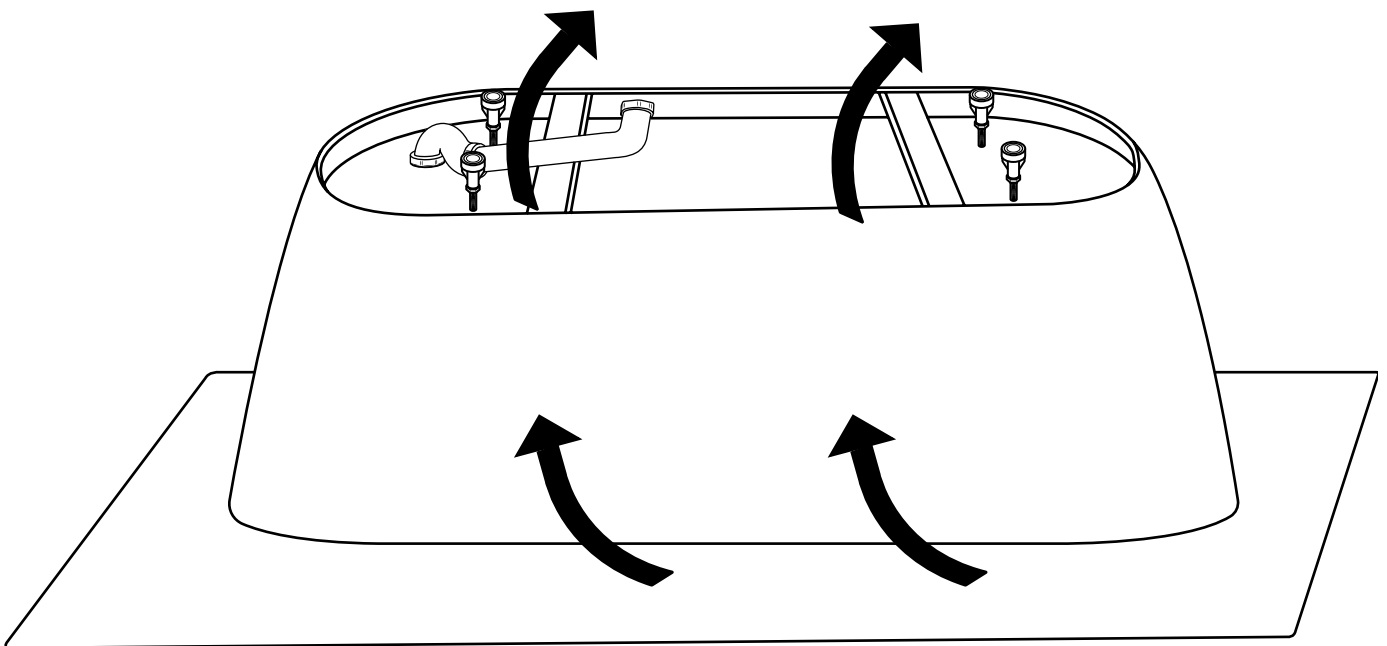

11

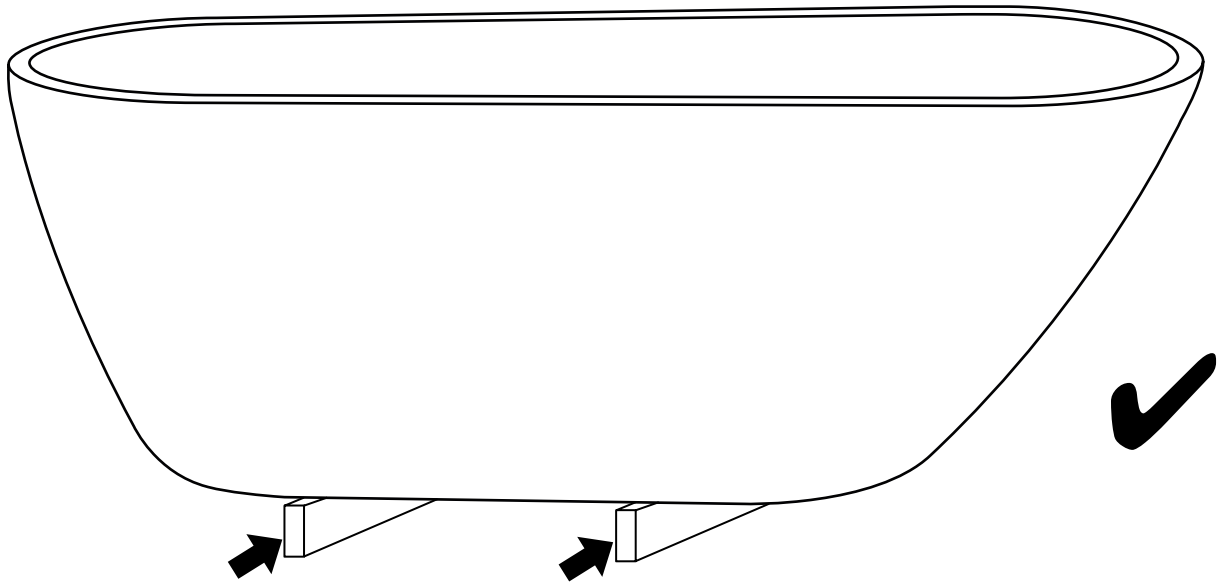


12

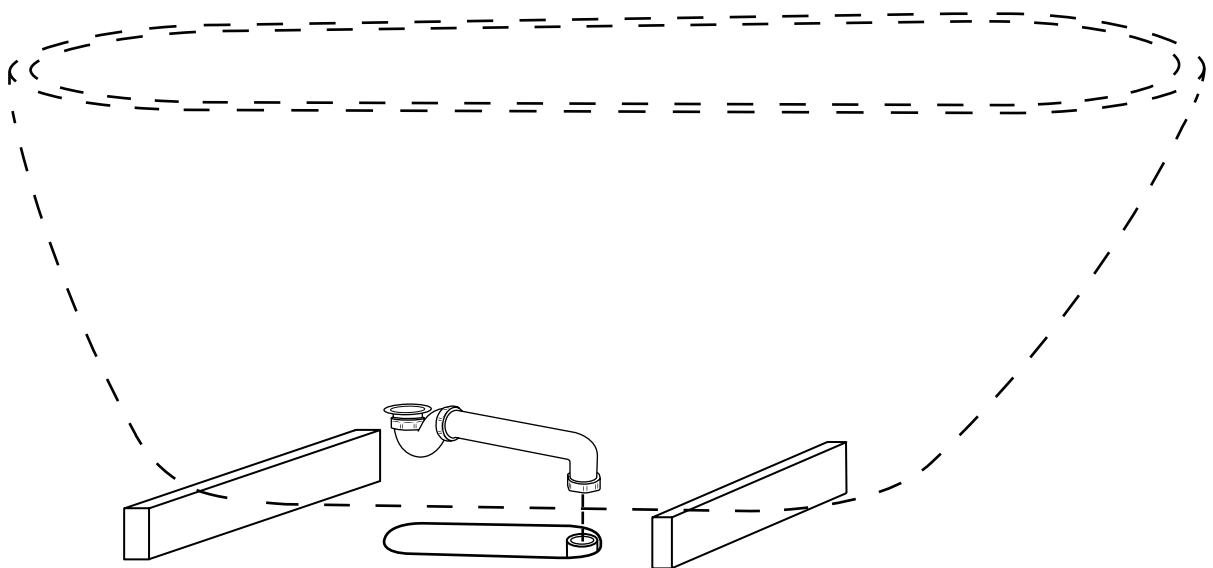


13


Min
x2

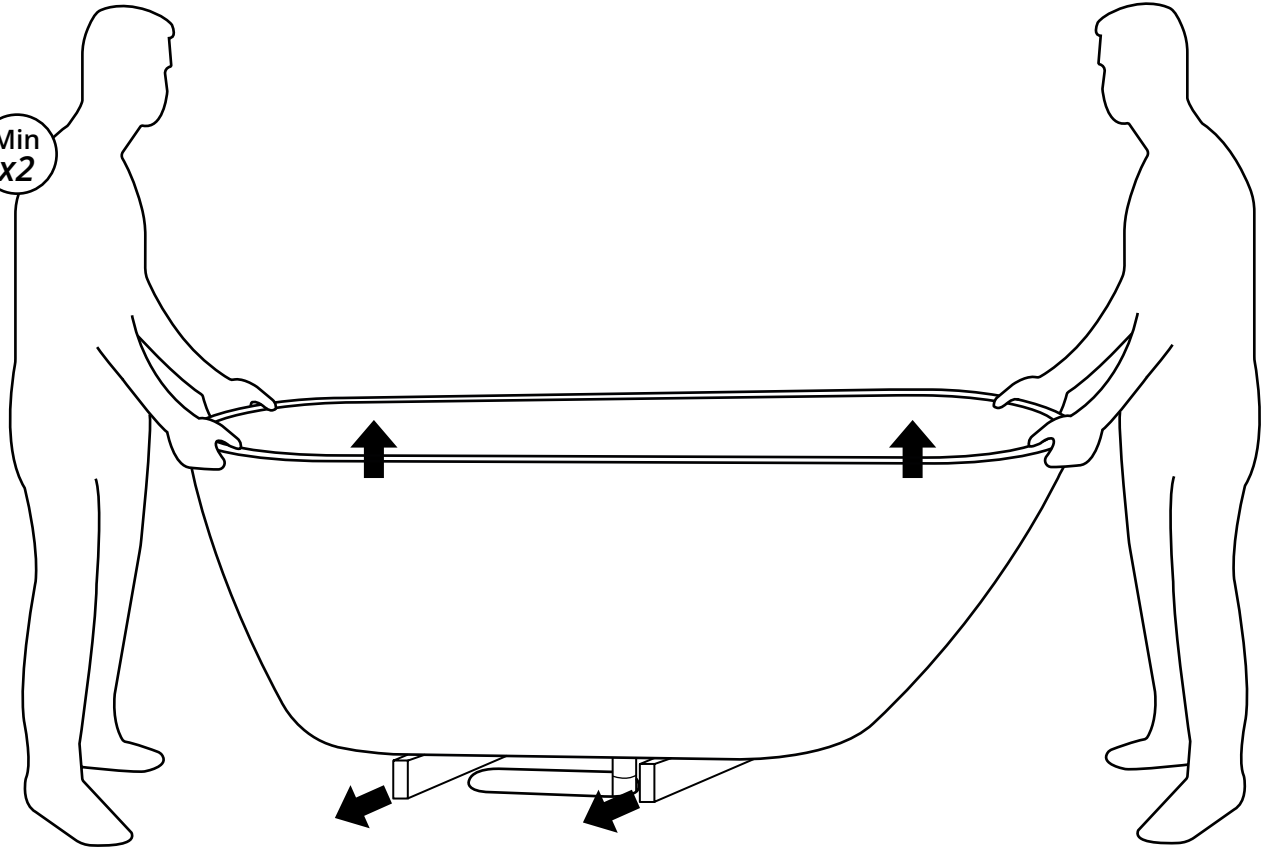

14

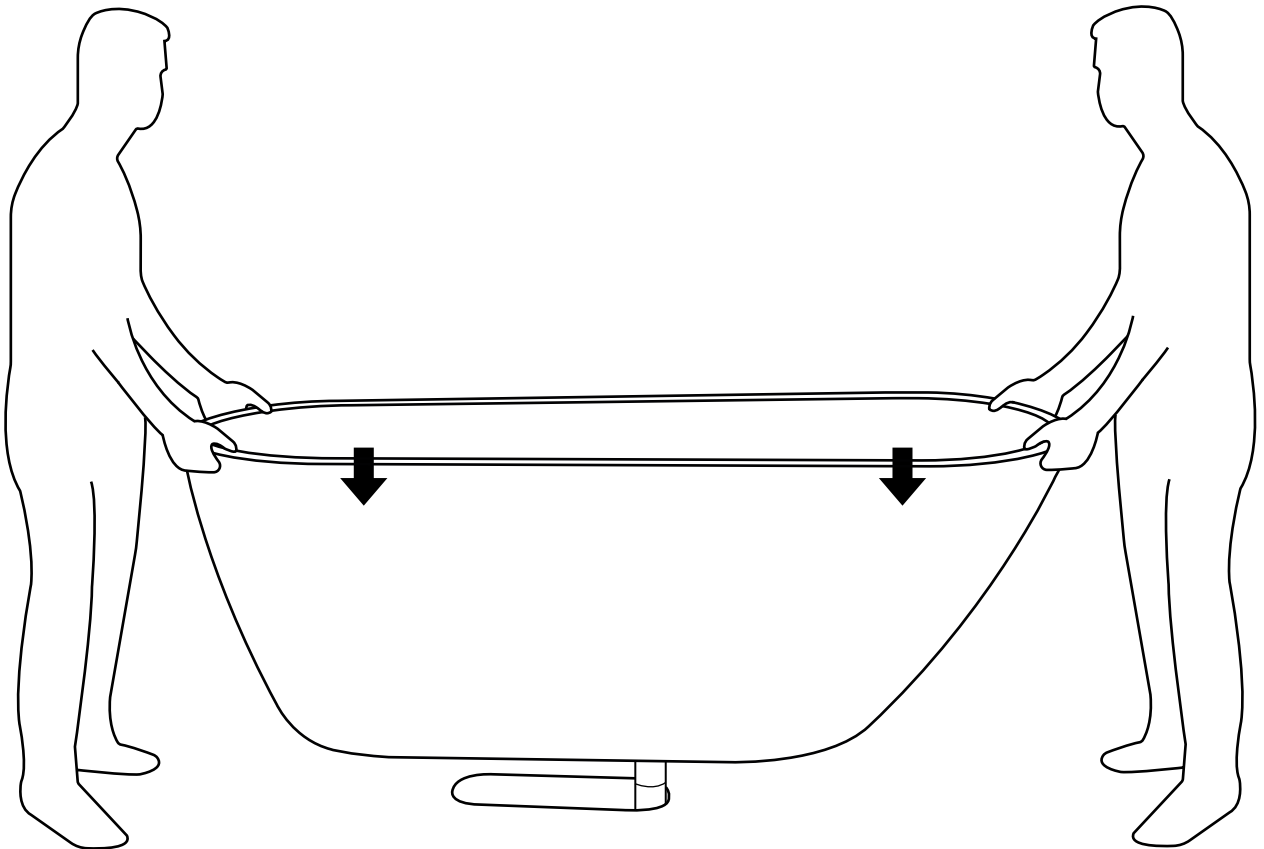


15

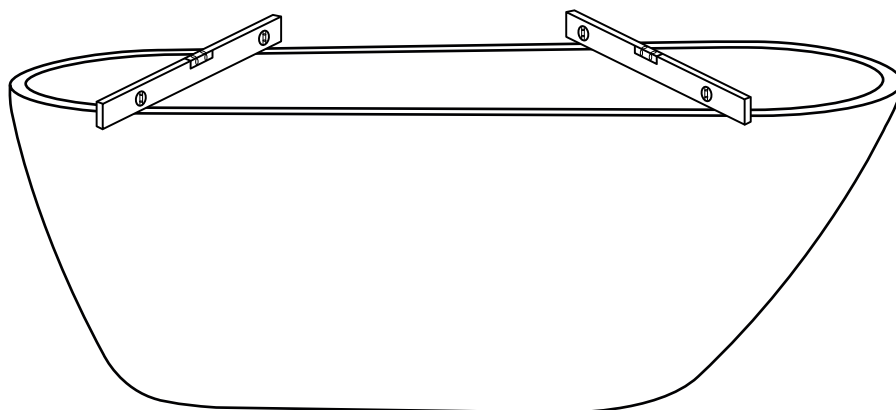


16



16

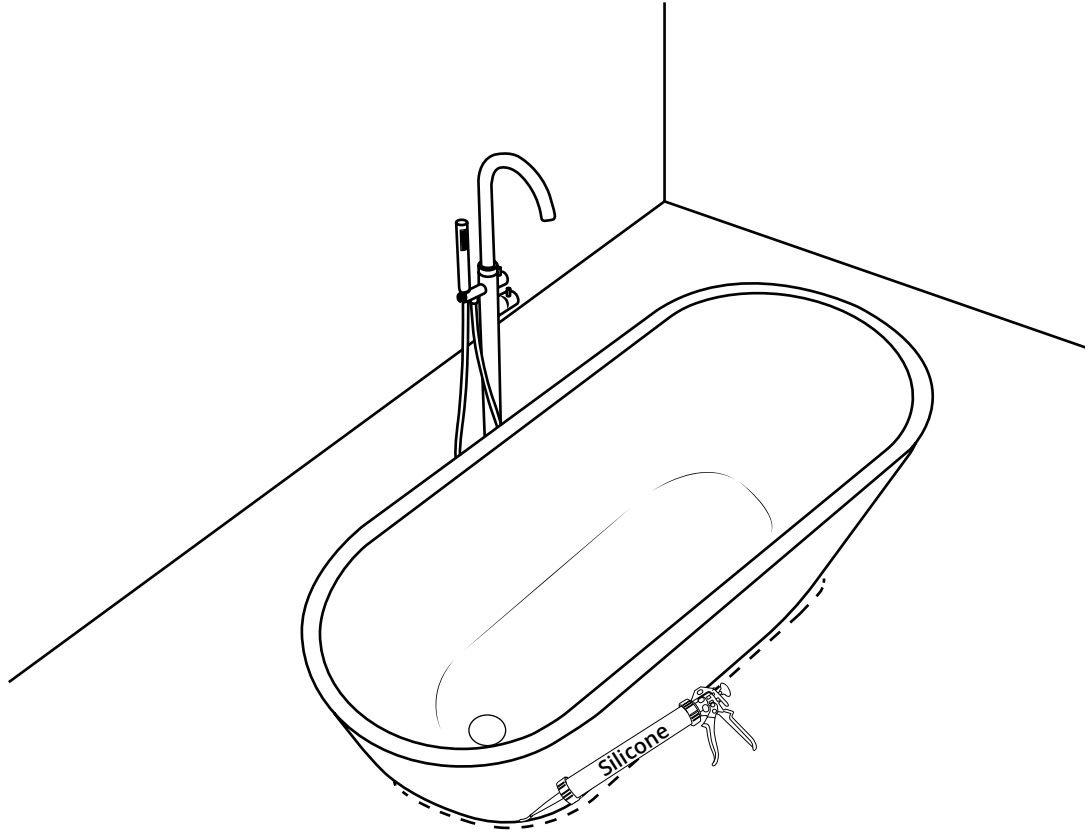

17

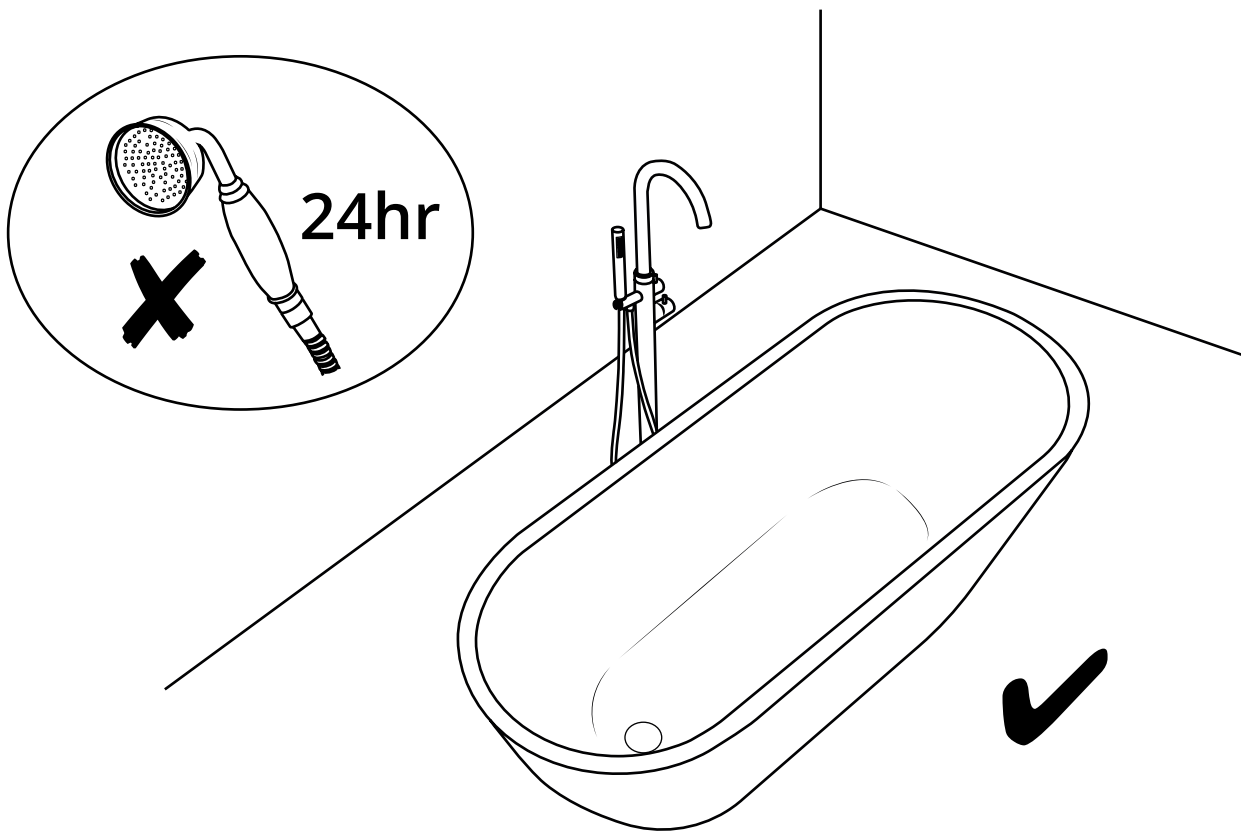


Change Bath Overflow

Installation

Tools required for installing:





Parts included:


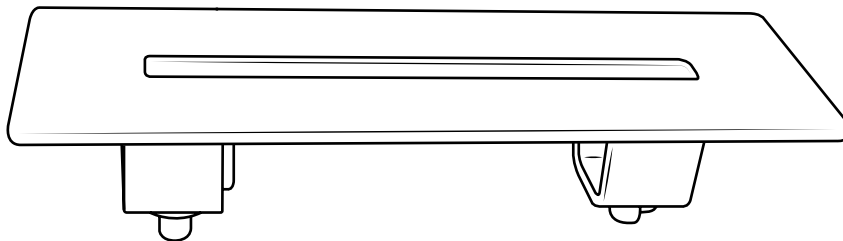


x1


1

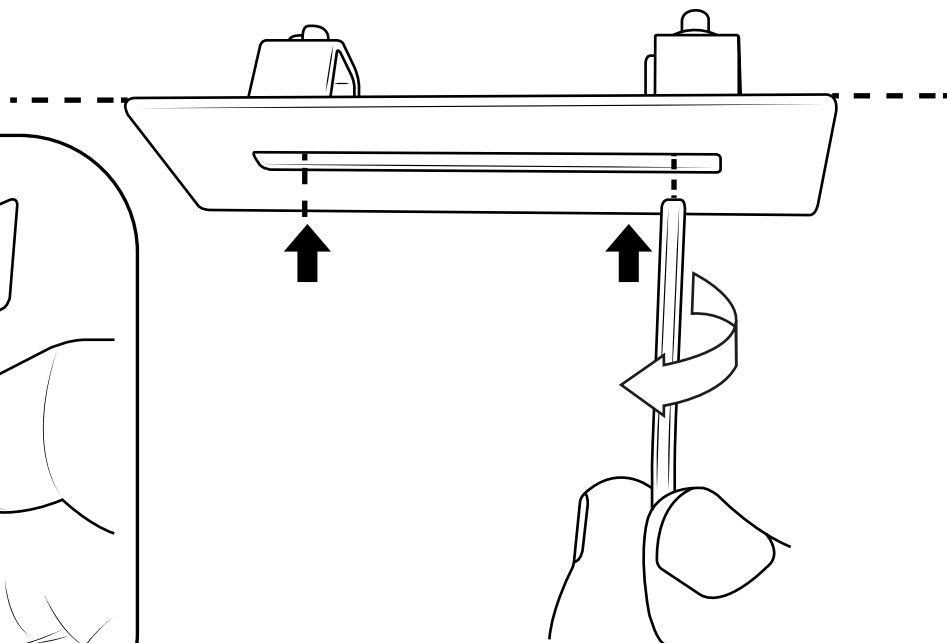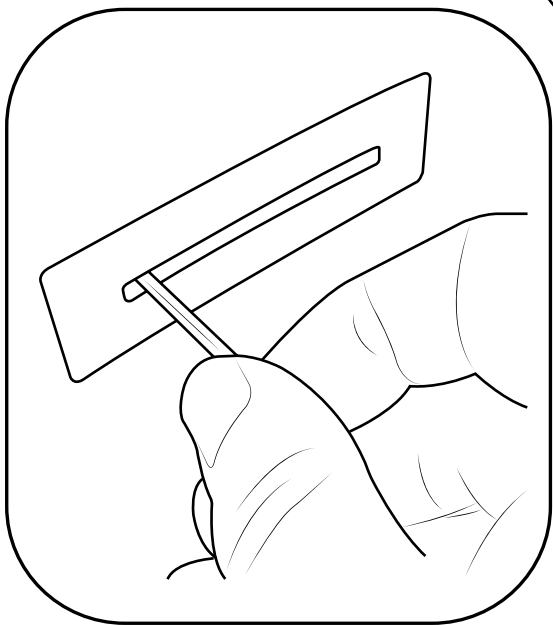


2

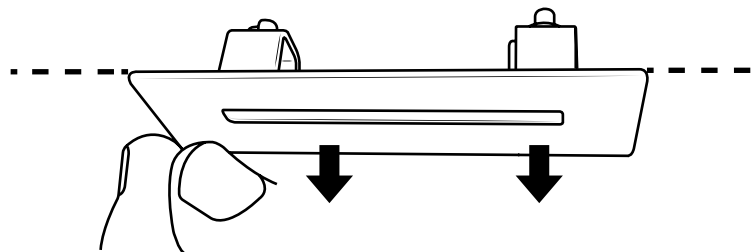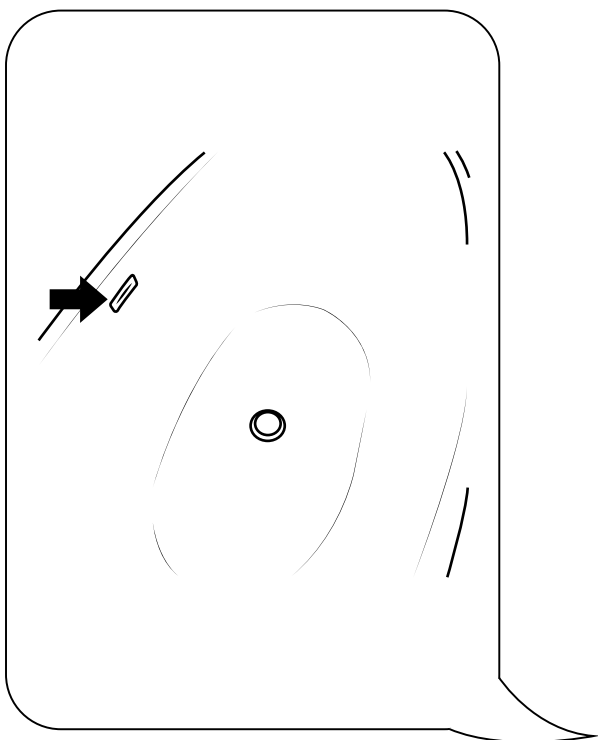

3

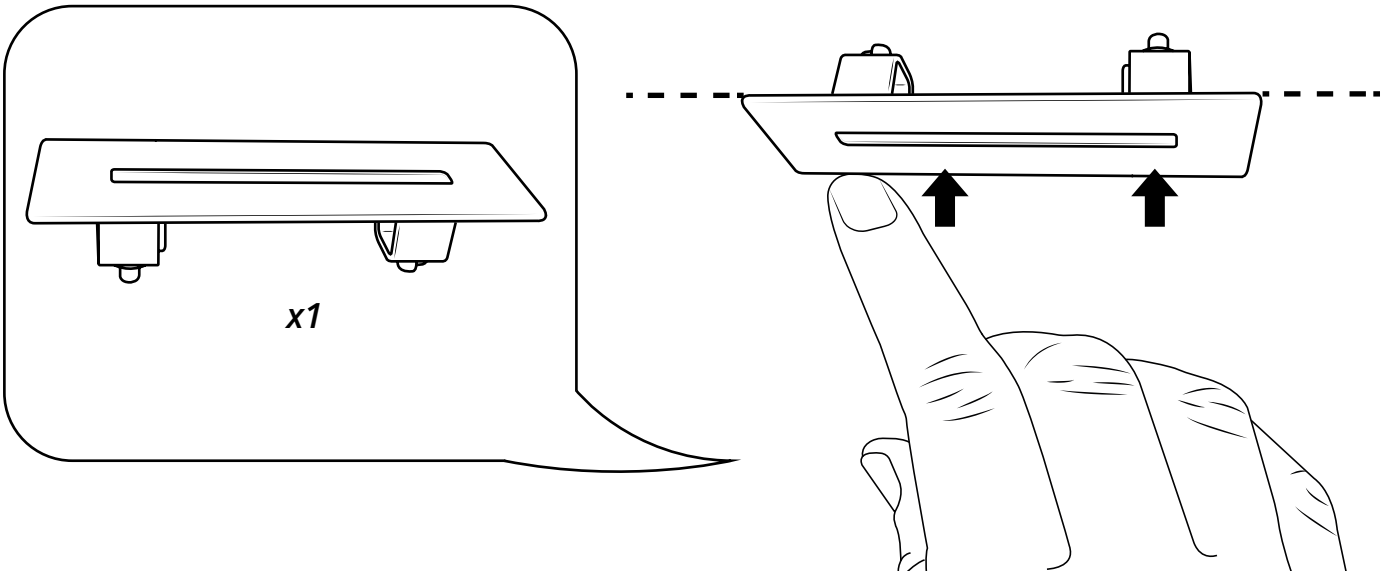

4

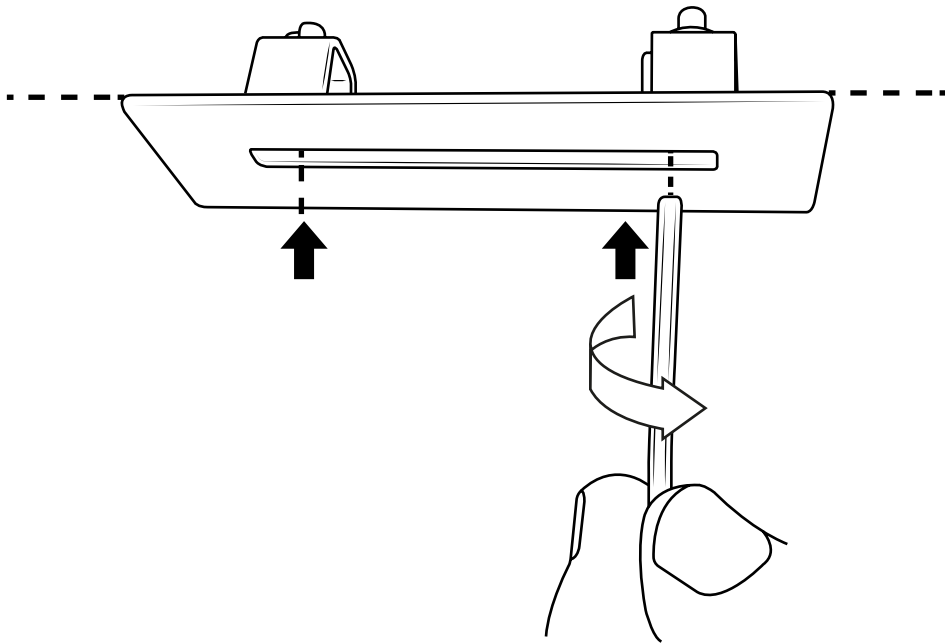

5

