
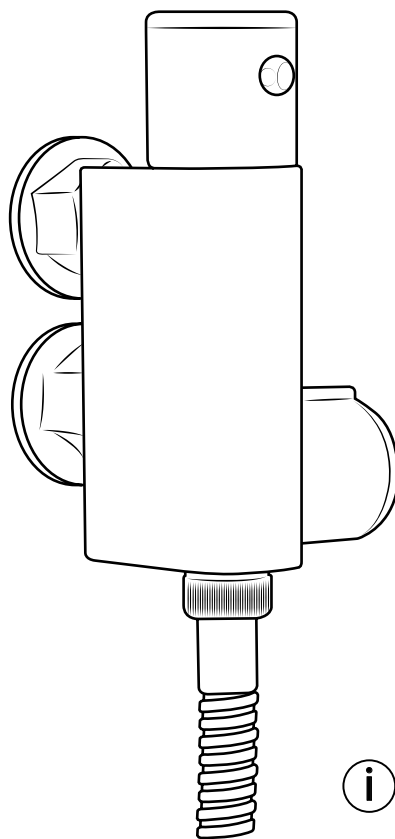



Milano

Thermostatic Douche Spray





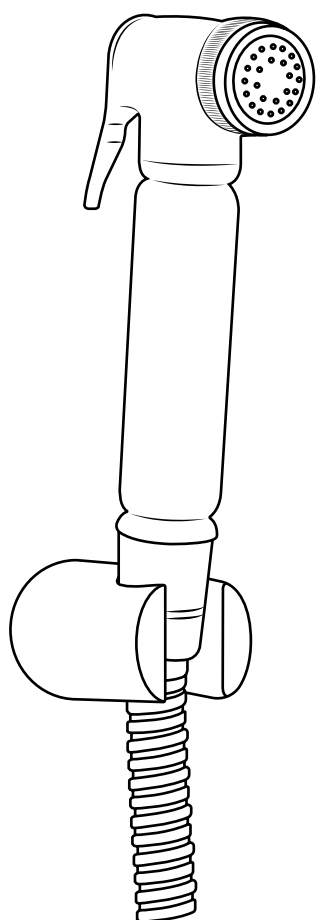


 Style may vary




Installation Guide

Installation


Tools required for installing:

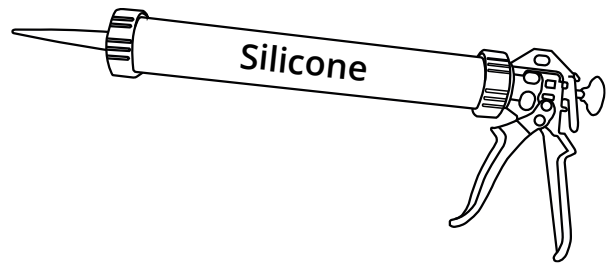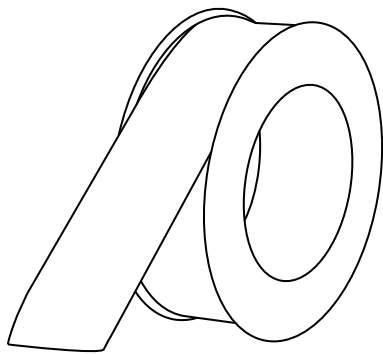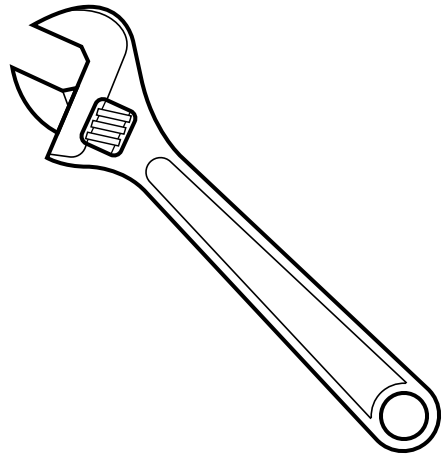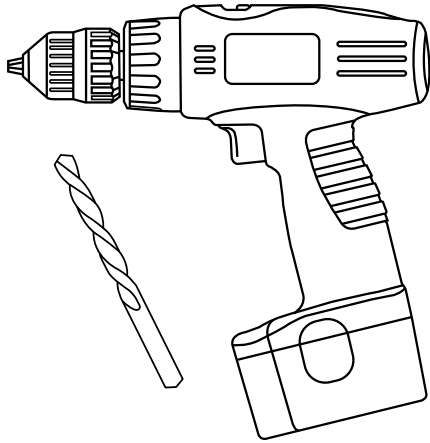




Parts included:

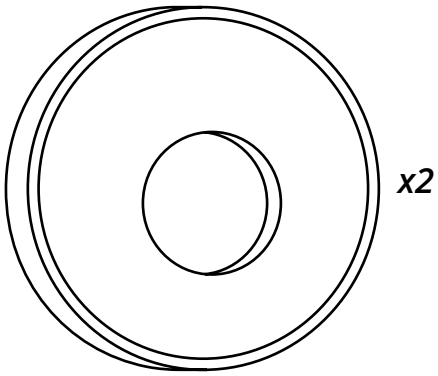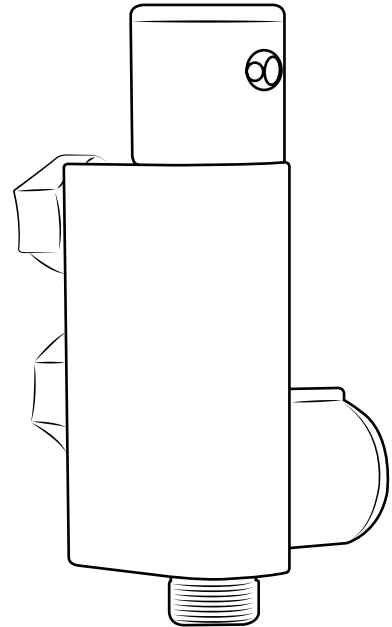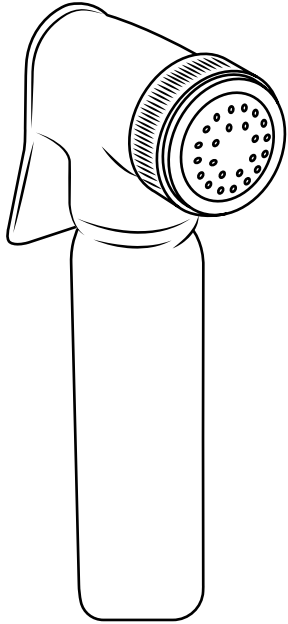


x2

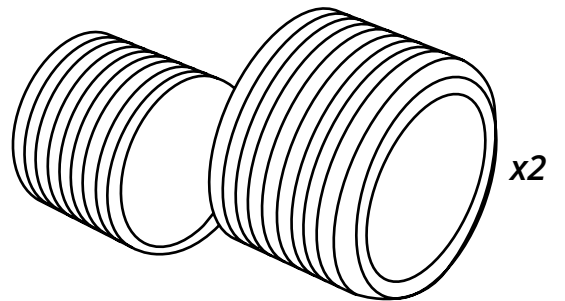


x2

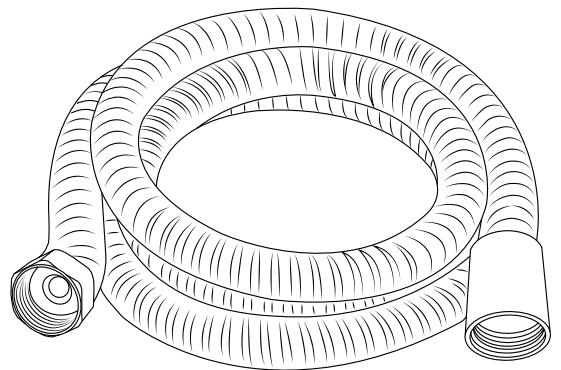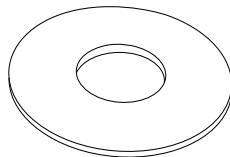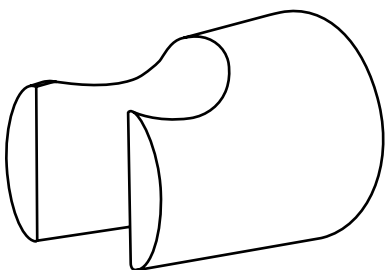


1

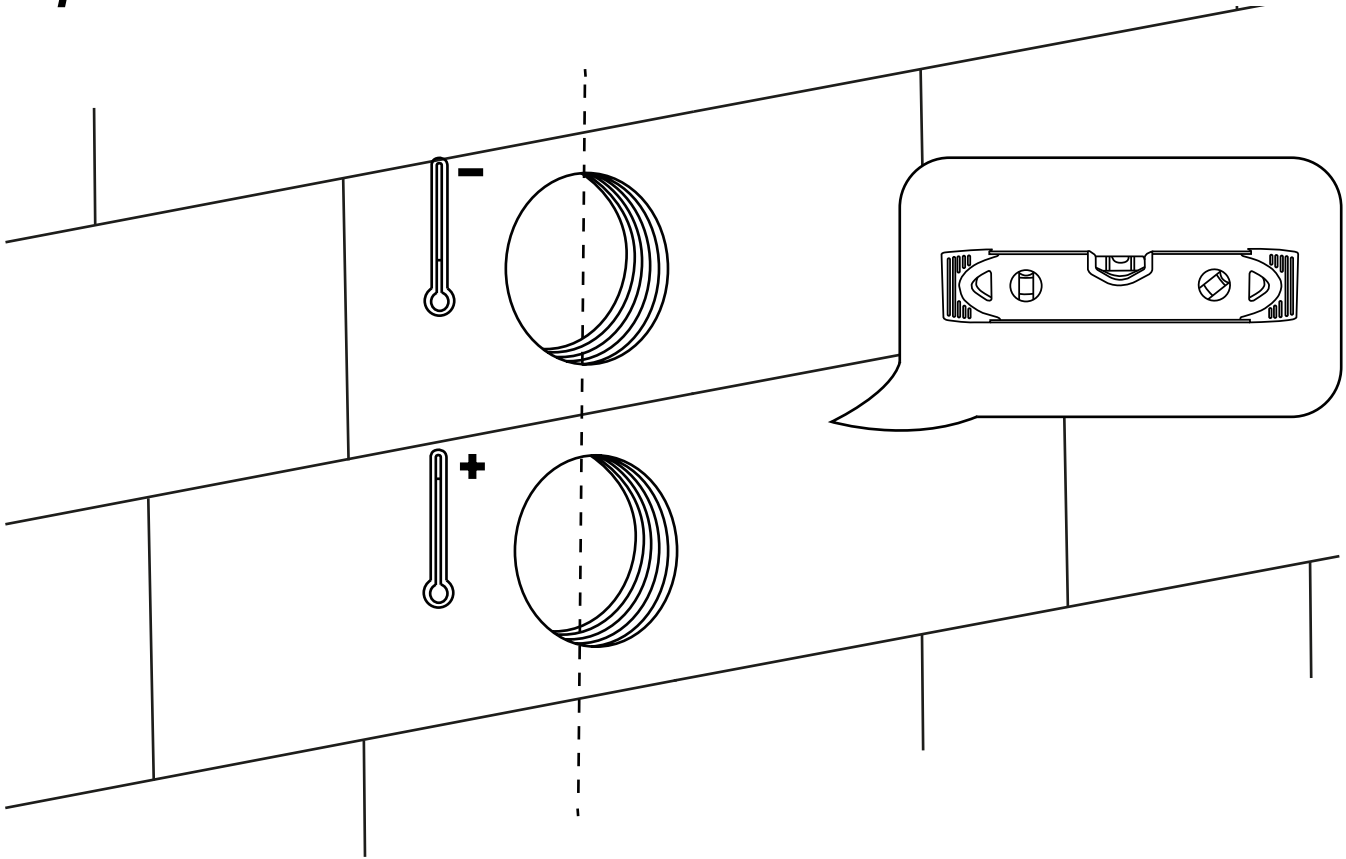


2

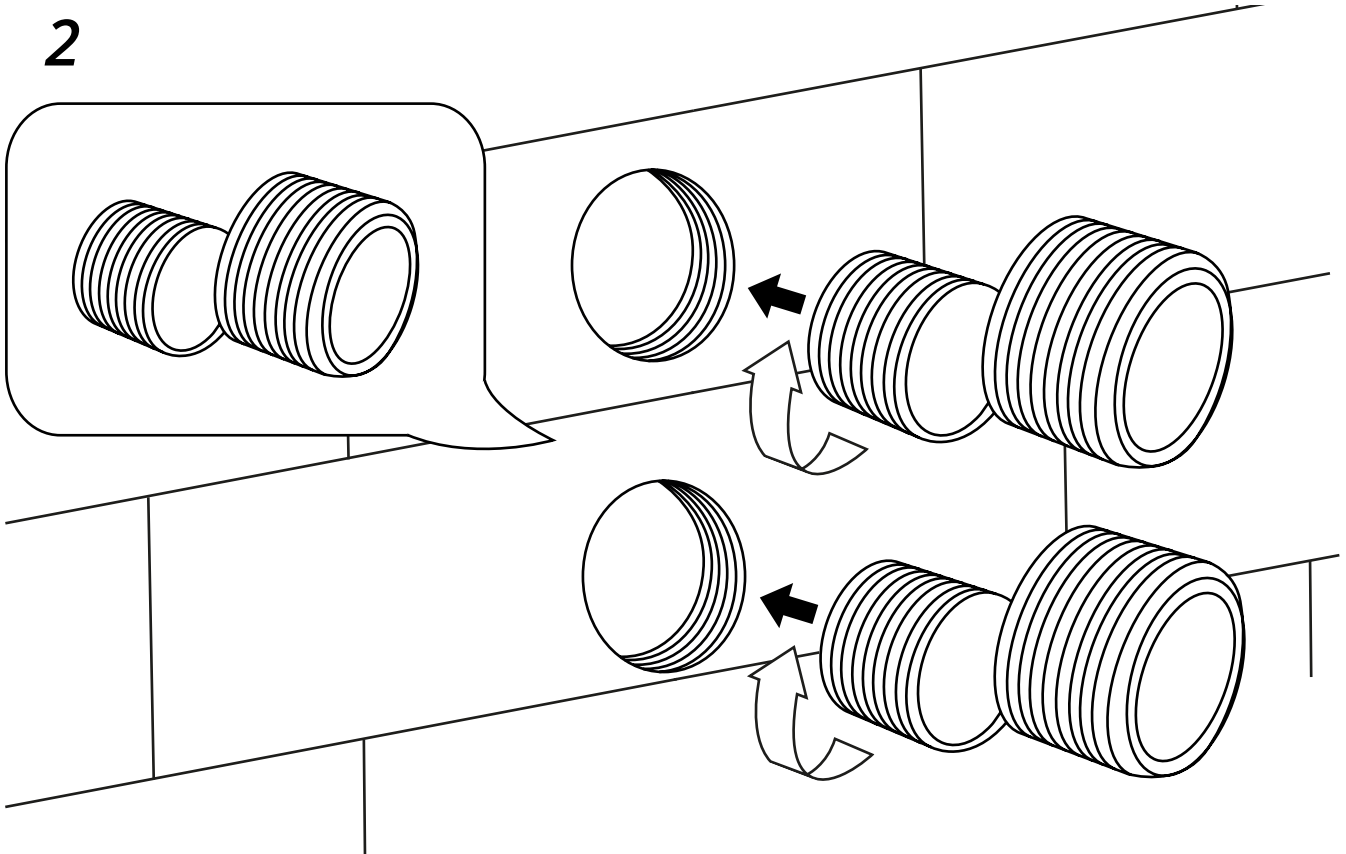


3

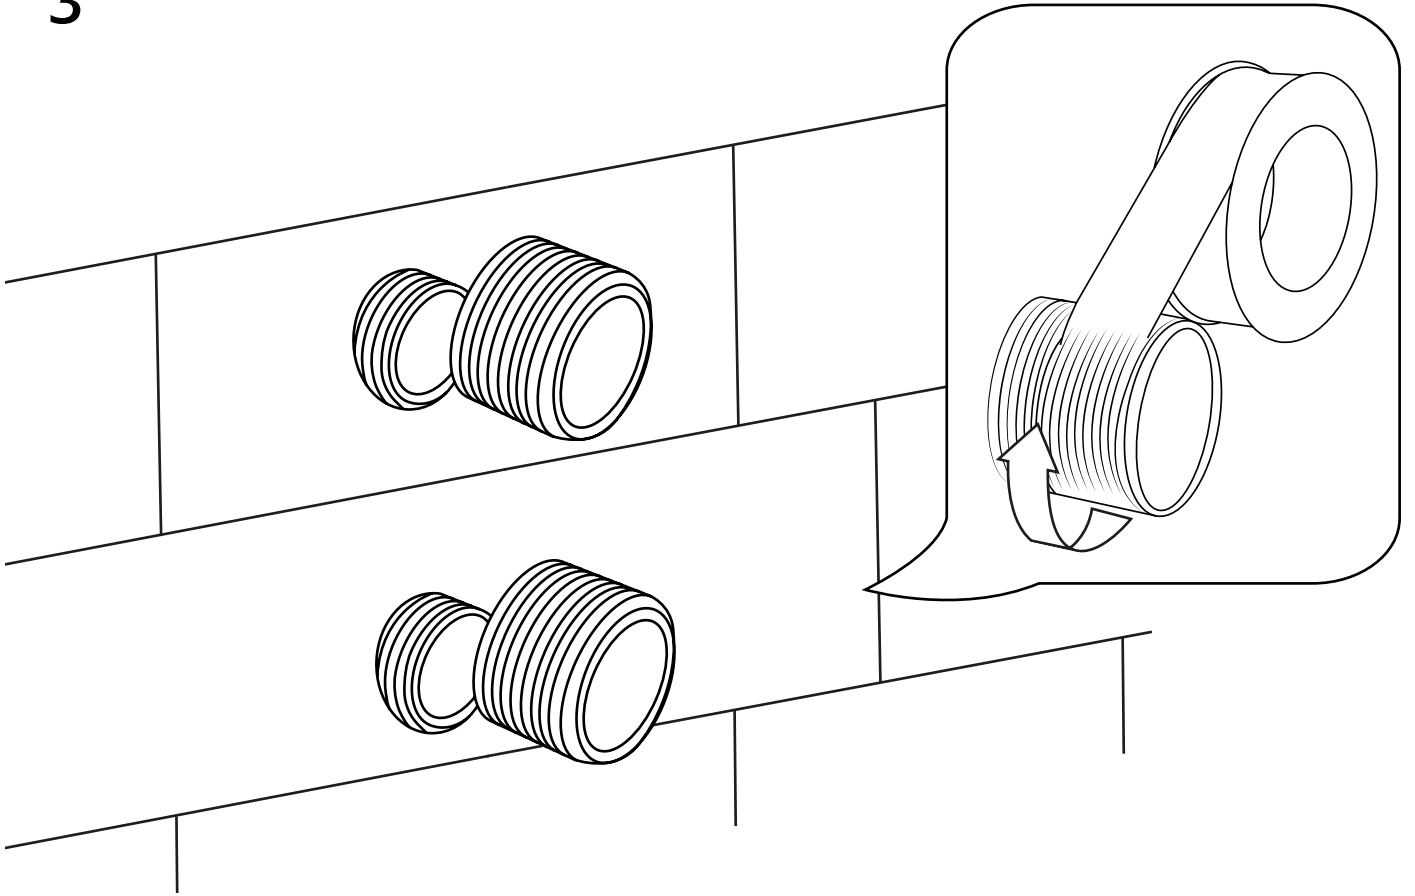


4

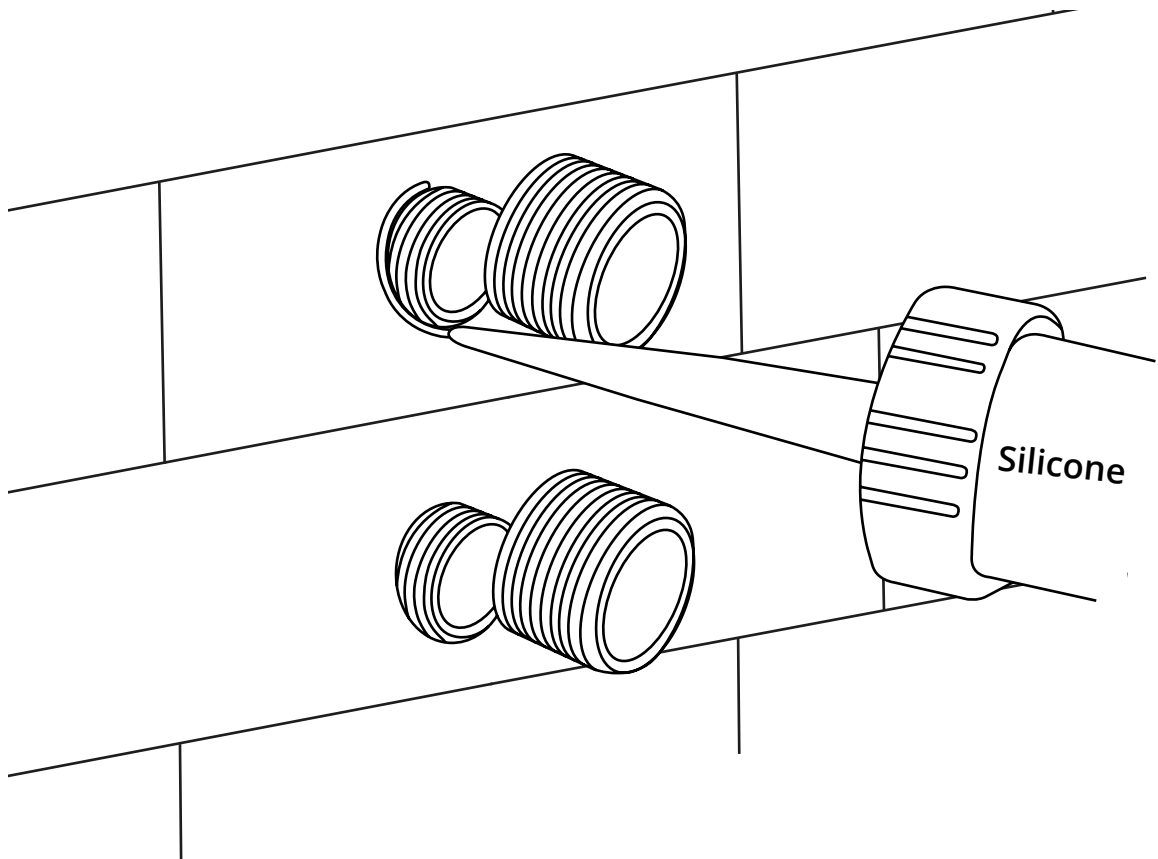


5

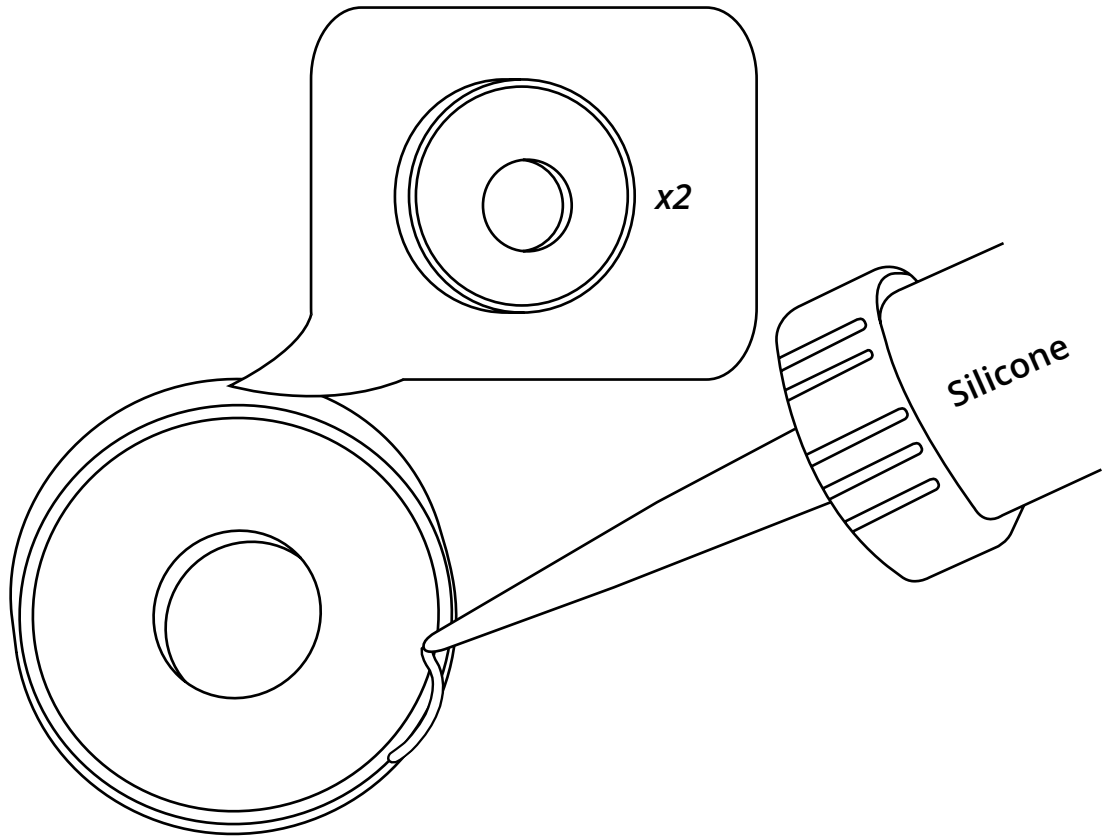


6

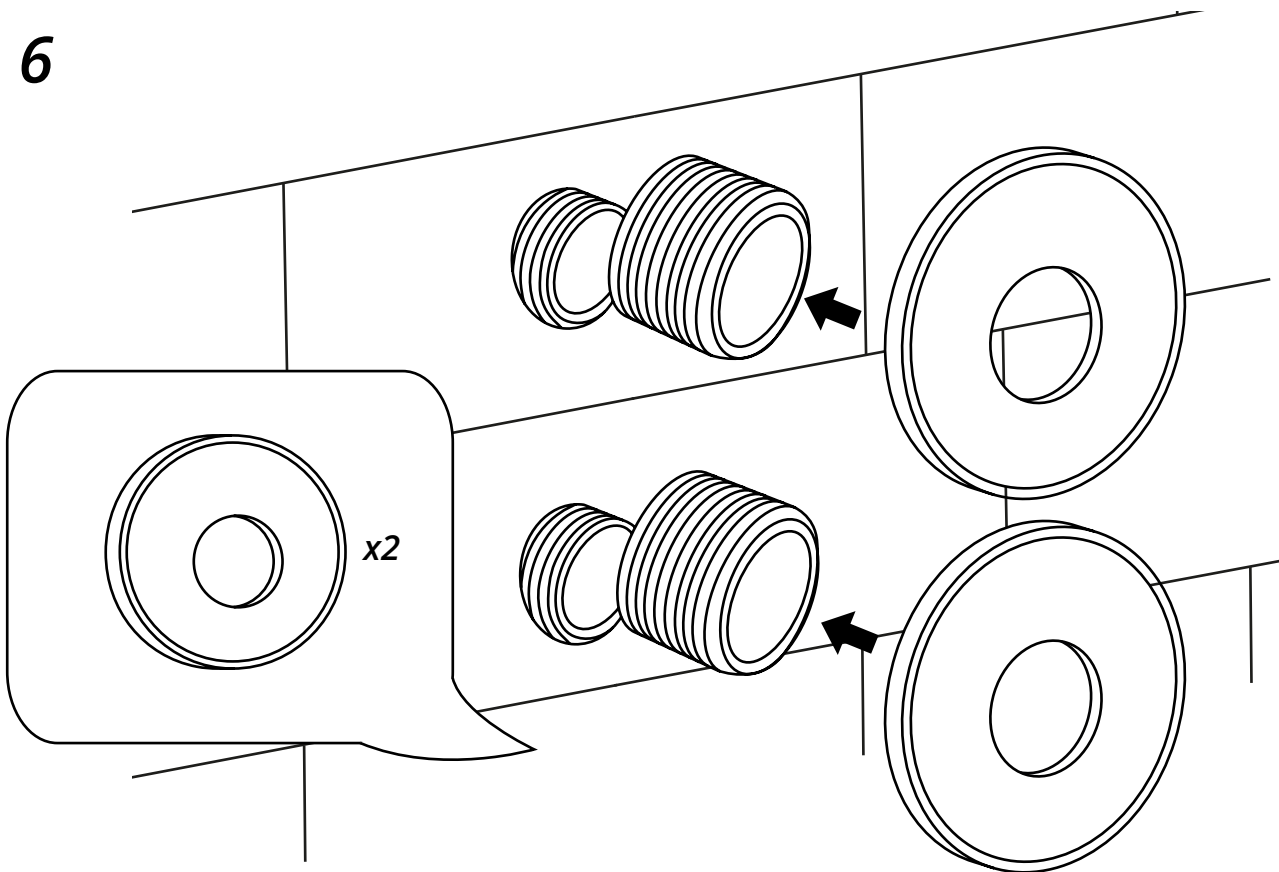


7

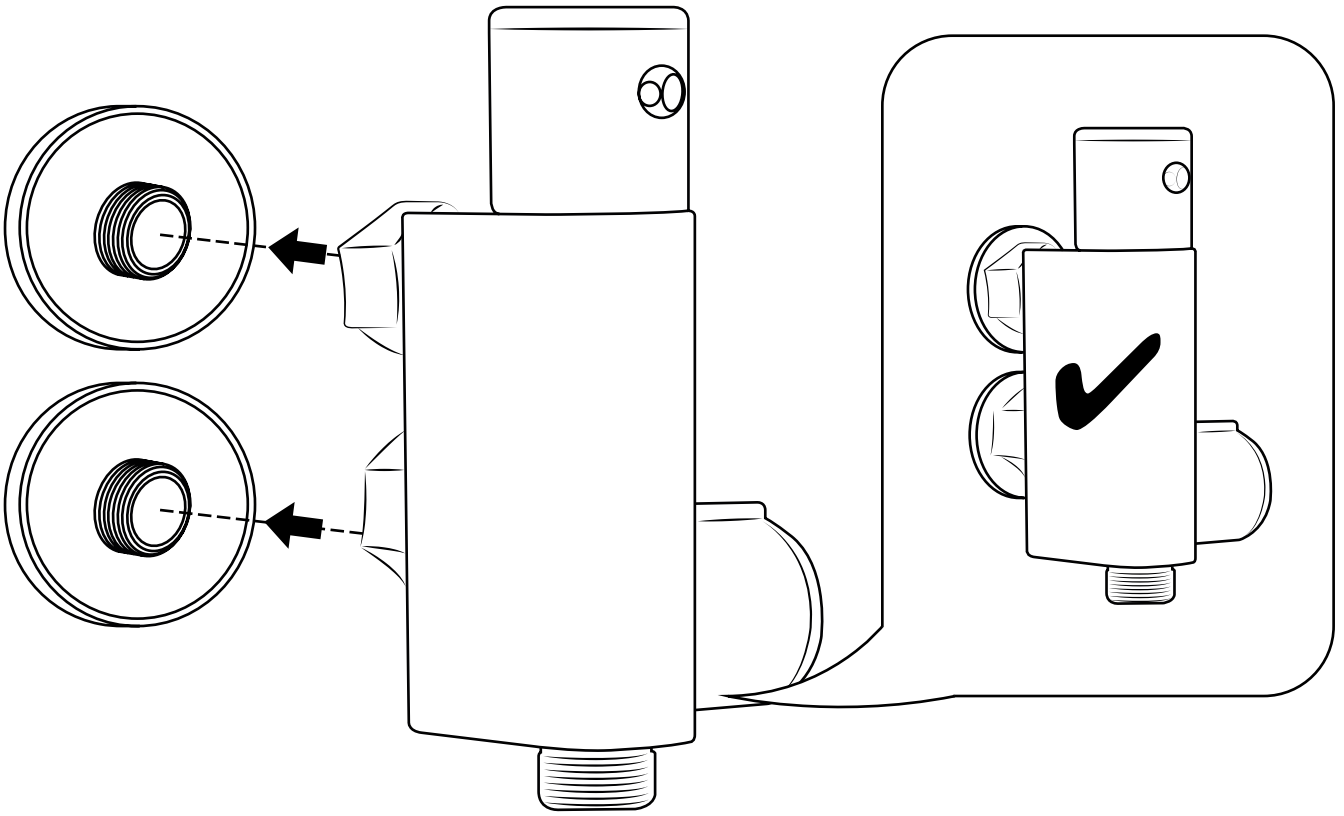


8

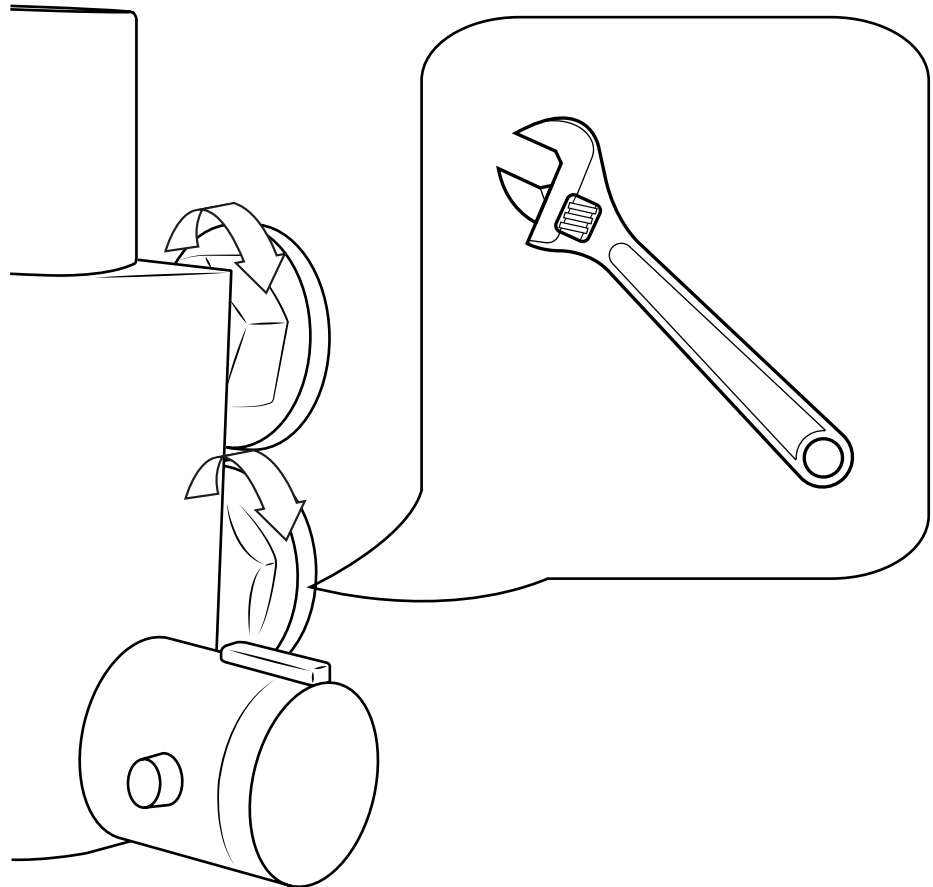


9

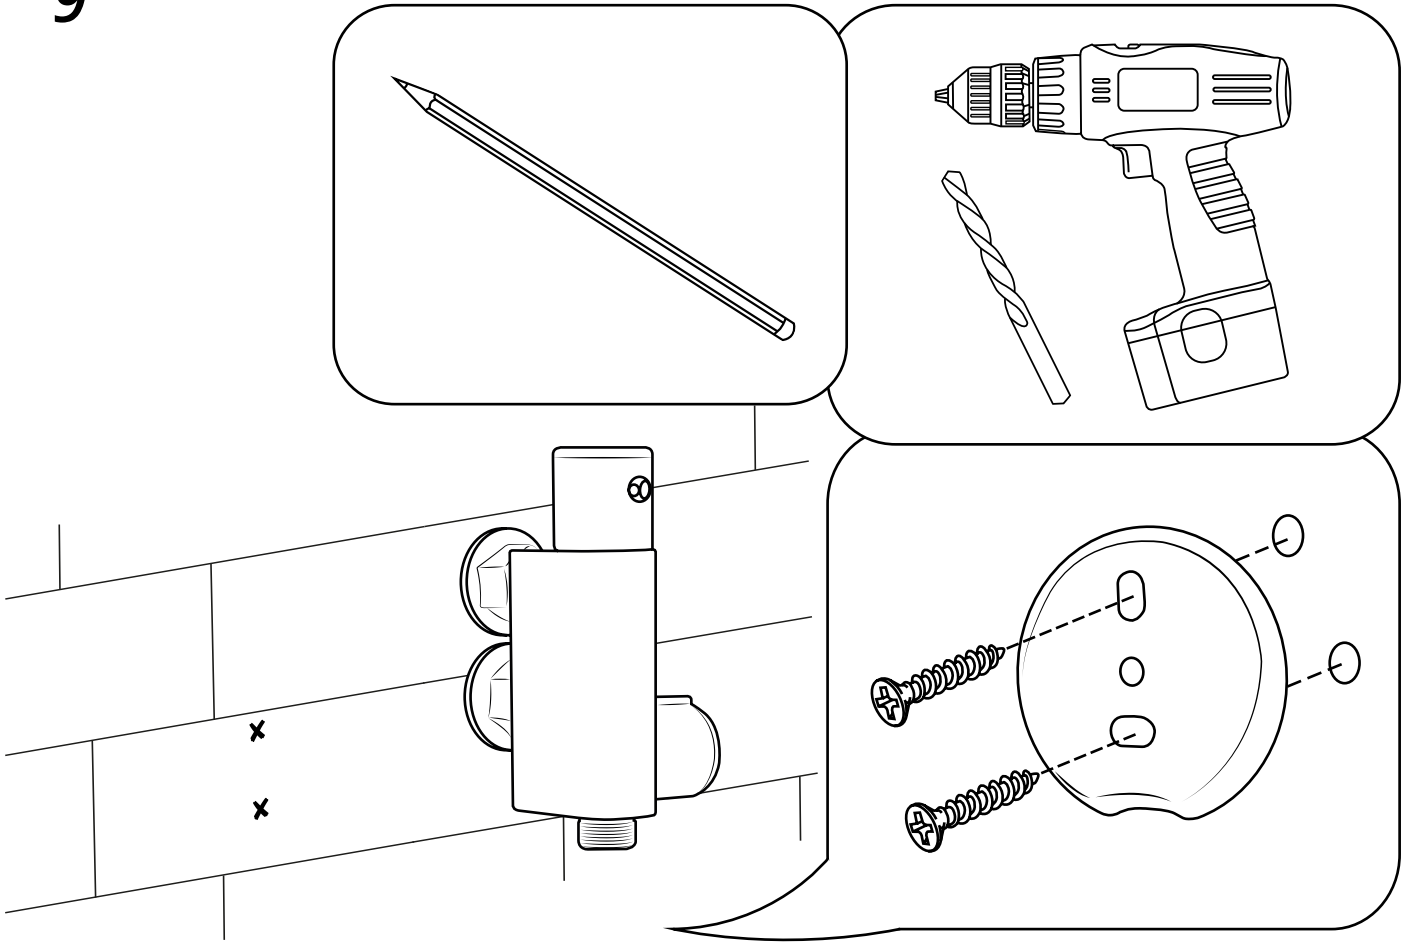


10

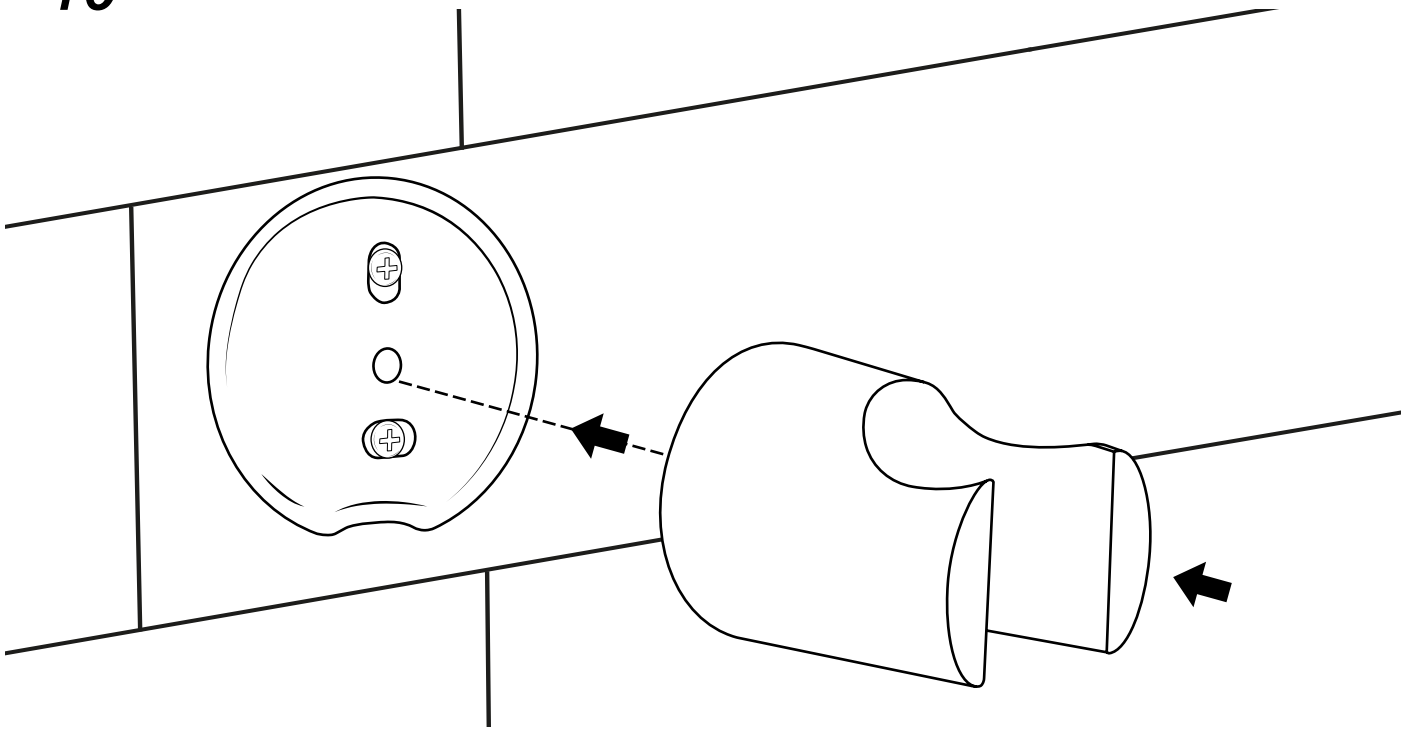


11

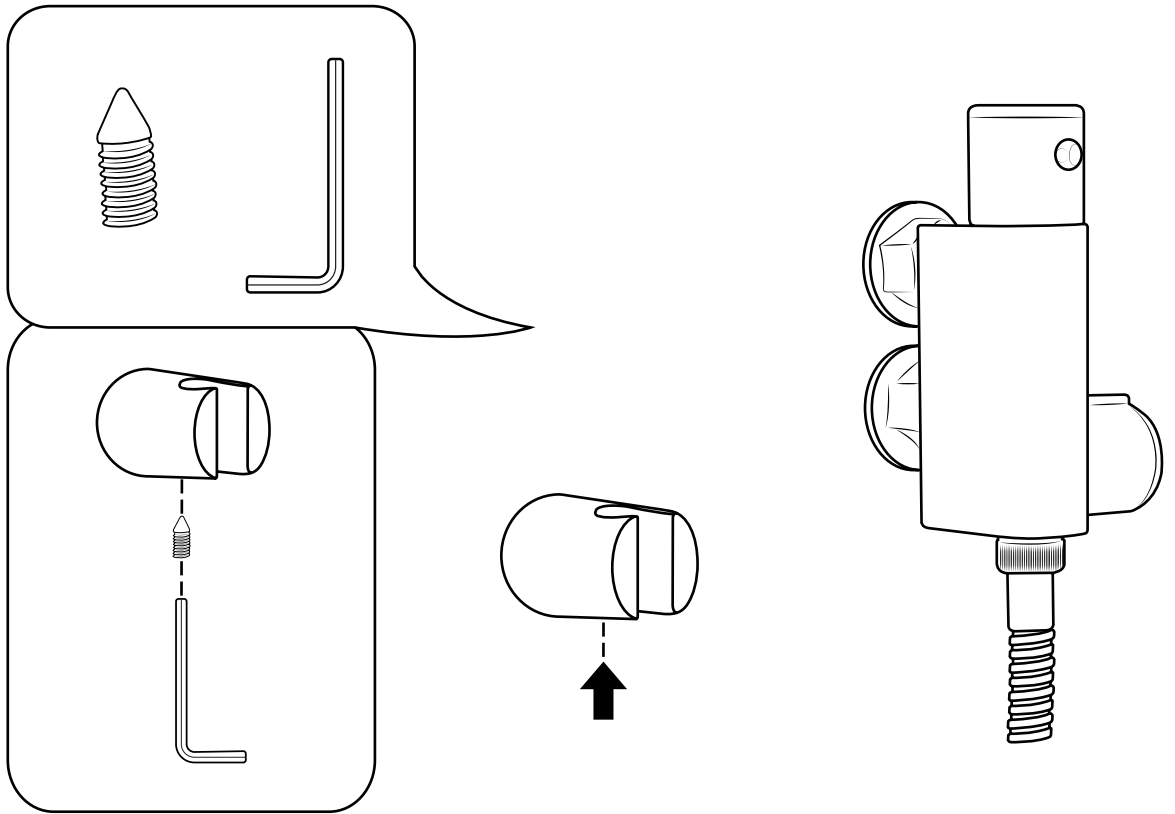


12

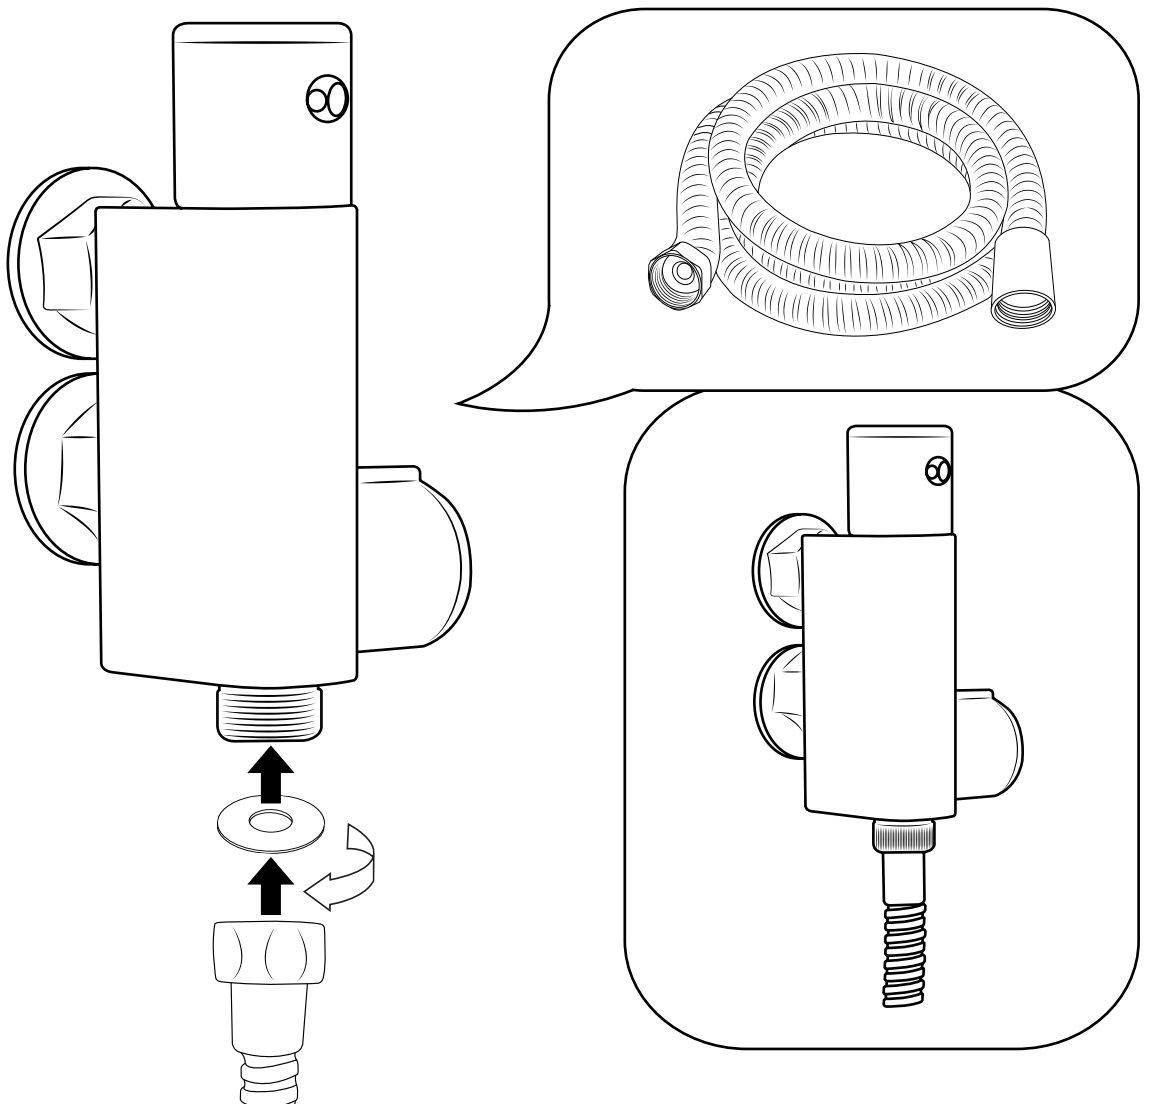

13

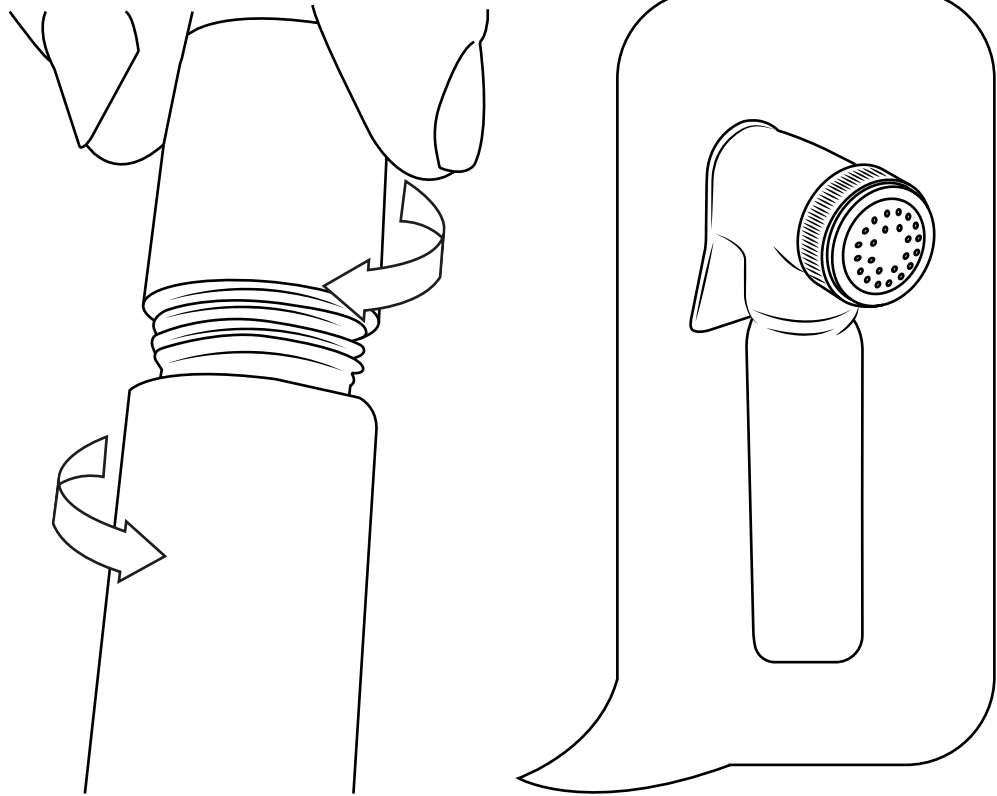

14

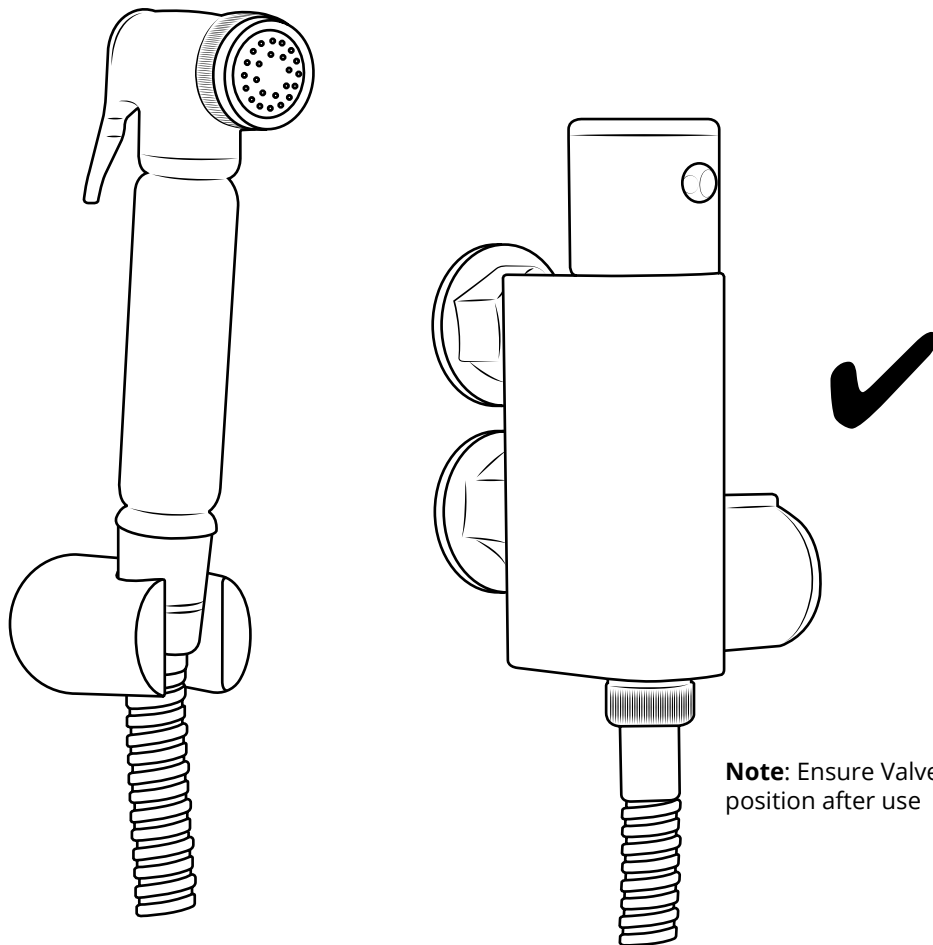

Note: Ensure Valve is turned to off position after use